




**USER MANUAL – EN**

**IN 26085 Exercise bike inSPORTline inCondi UB45i II**

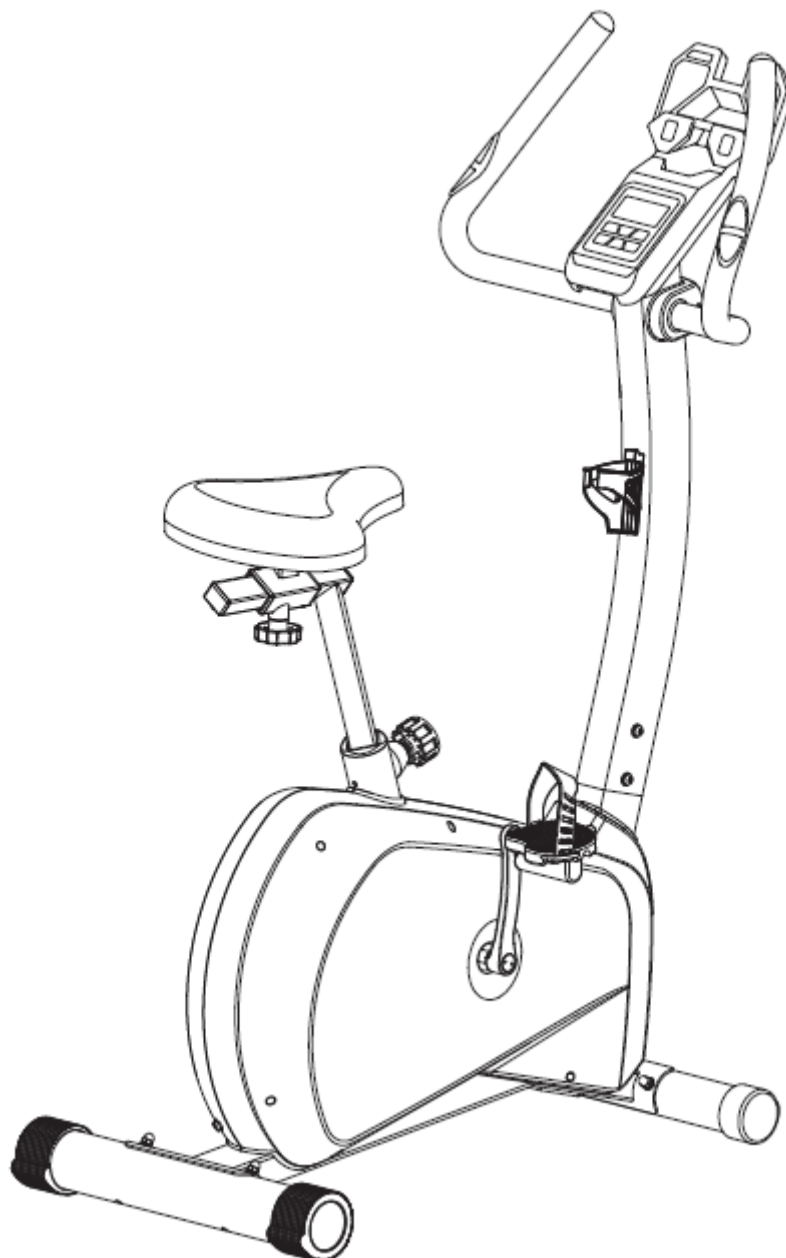

# CONTENTS

- SAFETY INSTRUCTIONS..... 3
- IMPORTANT NOTES ..... 3
- PARTS LIST ..... 4
- ASSEMBLY ..... 6
- CONSOLE ..... 11
  - BUTTONS ..... 11
  - DISPLAY ..... 12
  - PROGRAMS ..... 13
- iCARDIO APPLICATION ..... 21
- iCONSOLE APPLICATION ..... 26
  - SIGN IN..... 27
  - HISTORY ..... 28
  - REST HR TEST ..... 29
  - SUPPORT ..... 30
  - SETTING..... 31
  - QUICK START ..... 32
  - INTERVAL..... 34
  - MAP MY ROUTE ..... 36
  - CONSTANT POWER..... 37
  - PROGRAMS ..... 39
  - AI TRAINING..... 41
  - GYM CENTER ..... 43
- USE ..... 43
- CORRECT BODY POSTURE ..... 44
- MAINTENANCE ..... 44
- STORAGE ..... 44
- IMPORTANT NOTICE ..... 44
- ENVIRONMENT PROTECTION ..... 45
- TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS..... 45

SevenSport s.r.o. reserves the right to make any changes and improvements to its product without prior notice. Visit our website [www.insportline.eu](http://www.insportline.eu) where you will find the latest version of the manual.

## **SAFETY INSTRUCTIONS**




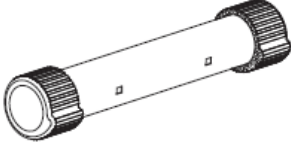
- To ensure the best safety of the exerciser, regularly check it on damages and worn parts.
- If you pass on this exerciser to another person or if you allow another person to use it, make sure that that person is familiar with the content and instructions in these instructions.
- Only one person should use the exerciser at a time.
- Before the first use and regularly make sure that all screws, bolts and other joints are properly tightened and firmly seated.
- Before you start your work-out, remove all sharp-edged objects around the exerciser.
- Only use the exercise for your work-out if it works flawlessly.
- Any broken, worn or defective part must immediately be replaced and/or the exerciser must no longer be used until it has been properly maintained and repaired.
- Parents and other supervisory persons should be aware of their responsibility, due to situations which may arise for which the exerciser has not been designed and which may occur due to children's natural play instinct and interest in experimenting.
- If you do allow children to use this exerciser, be sure to take into consideration and assess their mental and physical condition and development, and above all their temperament. Children should use the exerciser only under adult supervision and be instructed on the correct and proper use of the exerciser. The exerciser is not a toy.
- Make sure there is sufficient free space 0.6 m around the exerciser when you set it up.
- To avoid possible accidents, do not allow children to approach the exerciser without supervision, since they may use it in a way for which it is not intended due to their natural play instinct and interest in experimenting.
- Please note that an improper and excessive work-out may be harmful to your health.
- Please note that levers and other adjustment mechanisms are not projecting into the area of movement during the work-out.
- When setting up the exerciser, please make sure that the exerciser is standing in a stable way and that any possible unevenness of the floor is evened out.
- Always wear appropriate clothing and shoes which are suitable for your work-out on the exerciser. The clothes must be designed in a way so that they will not get caught in any part of the exerciser during the work-out due to their form (for example, length). Be sure to wear appropriate shoes which are suitable for the work-out, firmly support the feet and which are provided with a non-slip sole.
- Be sure to consult a physician before you start any exercise program. He may give you proper hints and advice with respect to the individual intensity of stress for you as well as to your work-out and sensible eating habits.
- Maximal weight: 130 kg
- Category: HC for home use









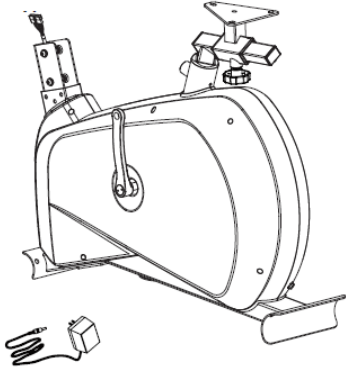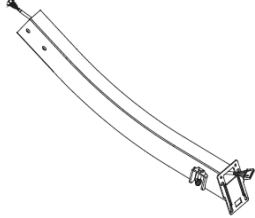

## **IMPORTANT NOTES**






- Assemble the exerciser as per assembly instructions and be sure to only use the structural parts provided with the exerciser and designed for it. Prior to the assembly, make sure the contents of the delivery is complete by referring to the parts list of the assembly and operating instructions.

- Be sure to set up the exerciser in a dry and even place and always protect it from humidity. If you wish to protect the place particularly against pressure points, contamination, etc., it is recommended to put a suitable, non-slip mat under the exerciser.
- The general rule is that exercisers and training devices are no toys. Therefore, they must only be used by properly informed or instructed persons.
- Stop your work-out immediately in case of dizziness, nausea, chest pain or any other physical symptoms. In case of doubt, consult your physician immediately.
- Children, disabled and handicapped persons should use the exercise only under supervision and in presence of another person who may give support and useful instructions.
- Be sure that your body parts and those of other persons are never close to any moving parts of the exerciser during its use.
- When adjusting the adjustable parts, make sure they are adjusted properly and note the marked, maximum adjusting position, for example of the saddle support, respectively.
- Do not work out immediately after meals!
- **WARNING!** A system for monitoring heart rate may not be accurate. Overloading during training may cause serious injury or death. If you feel any discomfort, immediately stop the exercise!

## PARTS LIST

	A	Main frame
	B	Middle post
	C	Front stabilizer
	D	Rear stabilizer

	E	Handlebars
	E1/E2	Handlebars covers
	F1	Seat adjustment
	G	Seat
	H	Console
	J1	Screw M8 x 75L
	J2	Screw M8 x 90L
	J3	Nut M8
	J4	Spring washer M8
	J5	Washer M8

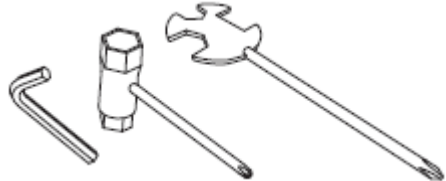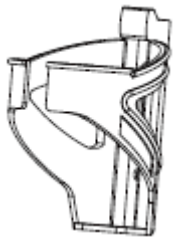	J9	Screw M4
	K1/K2	Pedals left/right
		Tools
	M1	Bottle holder
	M2	Screw


## ASSEMBLY

### STEP 1

Attach the front stabilizer (C) to the main frame (A) with screws (J1), washer (J5) and nut (J3) in the direction of the sticker on the stabilizer.

Attach the rear stabilizer (D) to the main frame (A) with screws (J2), washer (J5), spring washer (J4) and nut (J3).


If necessary, stabilize with the leveling feet.

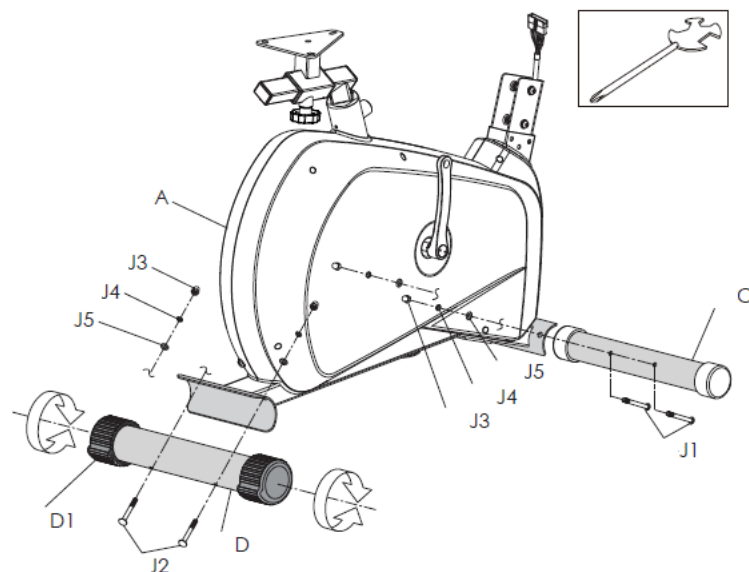

## STEP 2

Connect the cables (A1) and (B1).

Attach the middle post (B) to the main frame (A) with pre-installed screws (J4), spring washer (J6) and washer (J5).

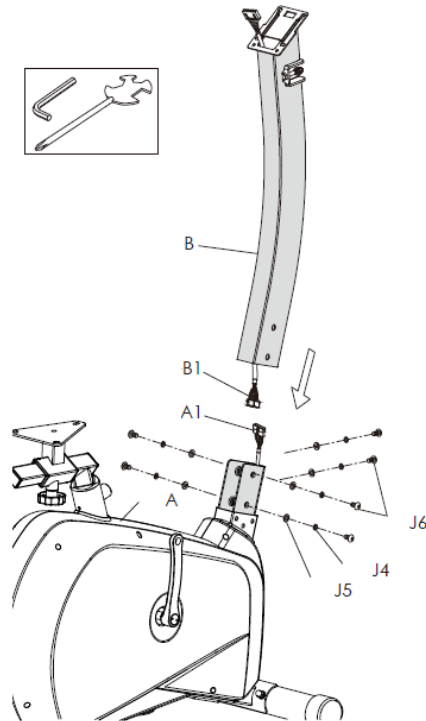


## STEP 3

Pass the cables through the bracket handle. Attach the handlebar to the middle post using pre-installed nuts (J7) and wave washer (J8).

Attach the handle caps (E1 and E2). Now go to the STEP 4.

Be careful not to pinch the cables.

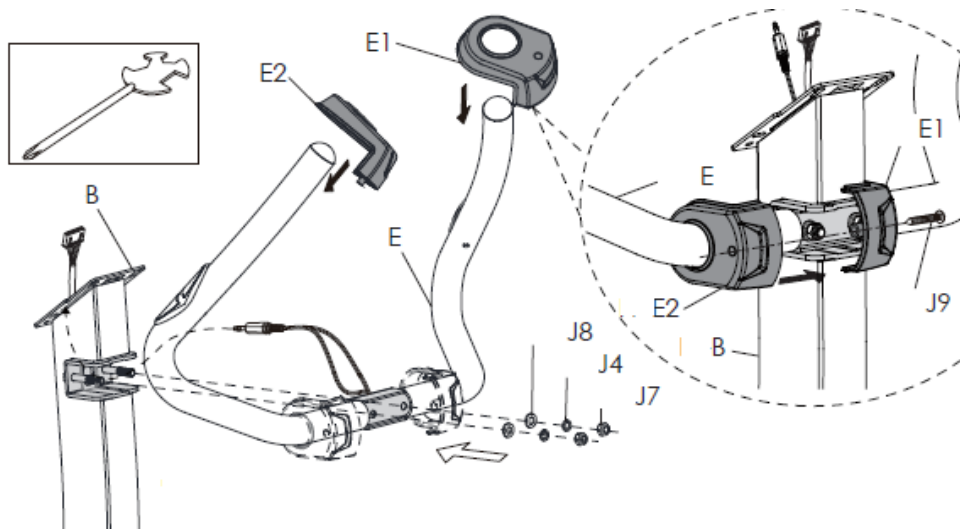


## STEP 4

Remove the 4 bolts (H1) from the console (H).

Connect the cables.

Attach the console (H) with the screws (H1) to the middle post (B).


Now you can finish attaching the handles in STEP 3 with the M4 screw (J9).

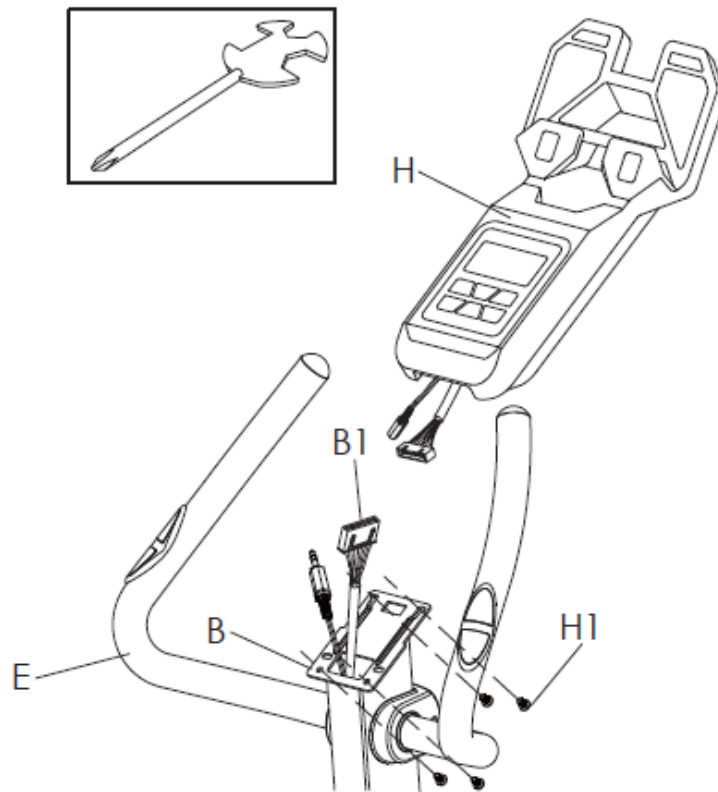

### STEP 5

Attach the seat post (F) to the main frame (A) with screws (F1). Make sure the screw is in the positioning hole.

Secure the seat (G) to the seat post (F3) using the pre-installed nuts (G1) and washer (G2) on the bottom of the seat.

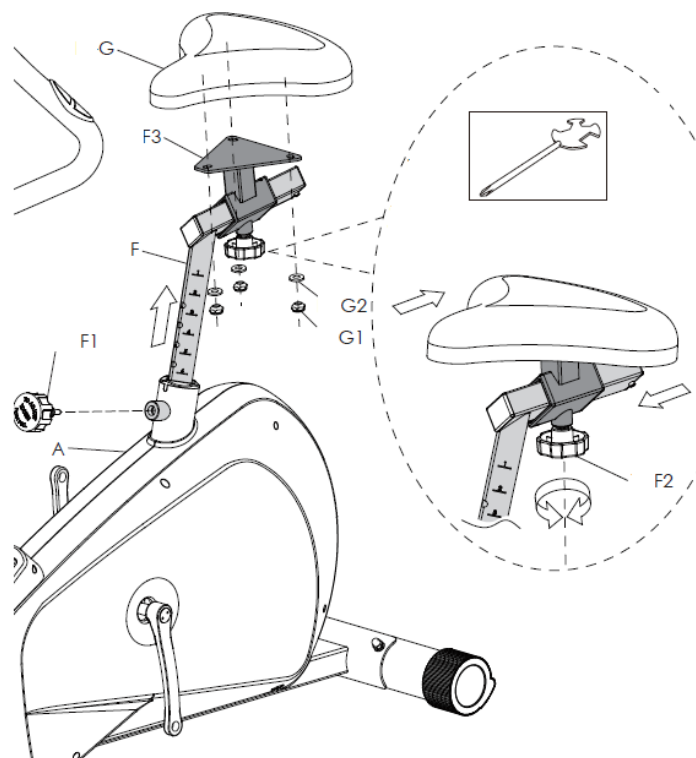




## PEDAL MOUNTING


Attach the left pedal (K1) to the left crank by screwing it counterclockwise.

Attach the right pedal (K2) to the right crank by screwing it clockwise

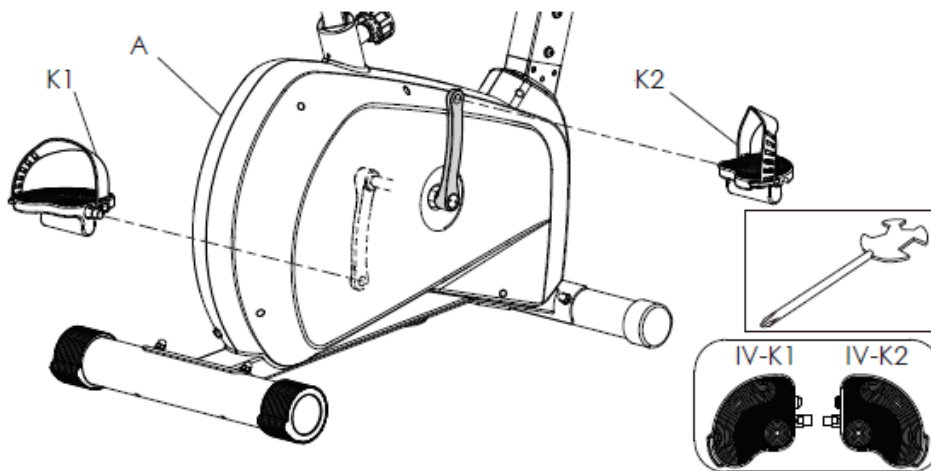


## BOTTLE HOLDER

Remove pre-installed screws (M2). Attach the bottle holder (M1) to the support tube (B) with screws (M2).

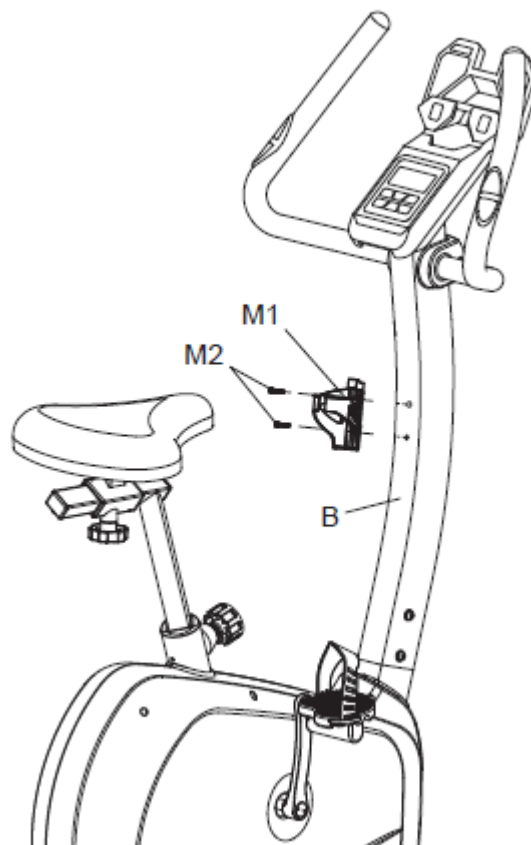


## TRANSPORT

When transporting grab the handles (E) and tilt slightly, push the exercise bike to the desired location.

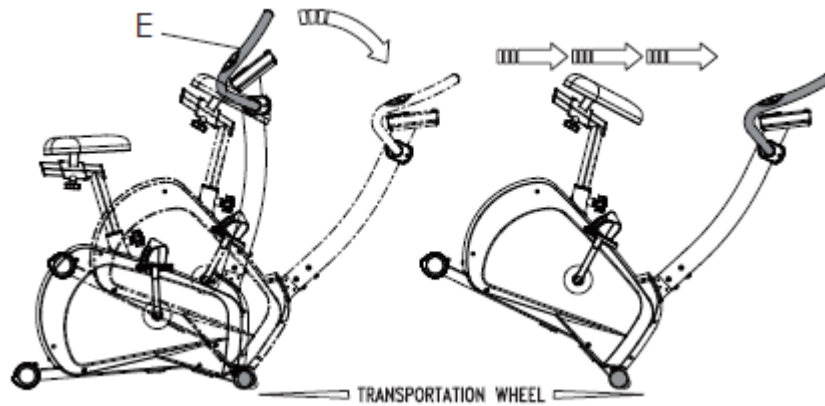

## CONNECTION

Place the device as close as possible to the outlet and connect.

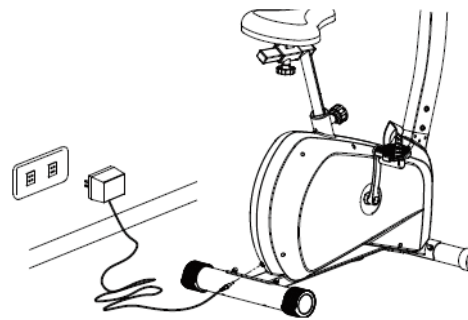

# CONSOLE



# BUTTONS

Button	Function
UP (+)	Increasing the value of e.g. load, performance, time Navigation button
DOWN (-)	Reduction of the value of e.g. load, power, time Navigation button
MODE	Selecting a function or setting
RESET	Hold for 2 seconds to restart the console Press the button to return to the main menu if the program is paused
START/STOP	Start or stop a program
RECOVERY	Heart rate recovery test

## DISPLAY

Function	Description
SPEED	Current speed Range: 0.0 ~ 99.9
RPM	Revolutions per minute Range: 0~999
TIME	Exercise time Range: 0:00 ~ 99:59
DISTANCE	Distance Range: 0.0 ~ 99.9
CALORIES	Burned calories Range: 0~9999
WATT	Power Range: 0~999
PULSE	Pulse Range: 0-30~230
U1~U4	U1 ~ U4 profiles Gender: male / female Age (A): 1 ~ 99 (original value 25) Height (H): 100 ~ 200 (original value 160) (cm) Weight (W): 20 ~ 150 (original value 50) (kg)
MANUAL	Manual program
WATTS	Power program, resistance changes depending on target power / rpm
H.R.C	Target heart rate program, the resistance changes depending on the target heart rate
USER	Create profiles, max 4
PROGRAM	Selection of 12 preset programs
RESISTANCE	Range: 1~16
BLUETOOTH	Yes

## PROGRAMS

### TURN ON

- Plug in the power (or hold RESET for 2 seconds), the console will start, and the display will show all segments for 2 seconds (Fig. 1).
- The LCD display will display the wheel diameter, the unit (Km or mile) for 1 second (Fig. 2), the resistance will be set to 1 level.

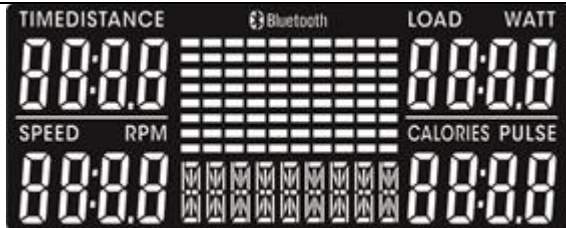


Fig. 1



Fig. 2

### PROGRAM SELECTION

- It is necessary to select the user program U1 ~ U4 (Fig. 3), then it is necessary to set the gender, age, height, weight (Fig. 4 ~ 7), then select the program (Fig. 8).

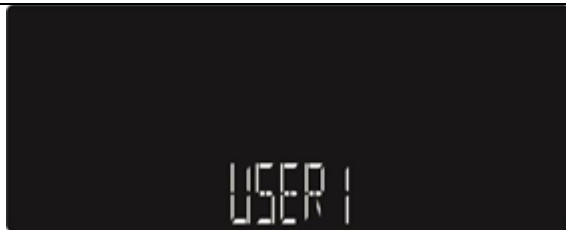


Fig. 3



Fig. 4

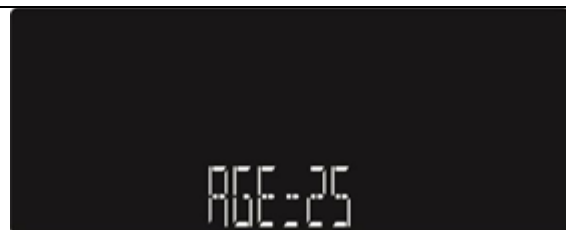


Fig. 5

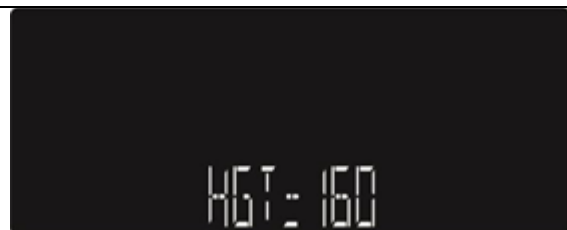


Fig. 6


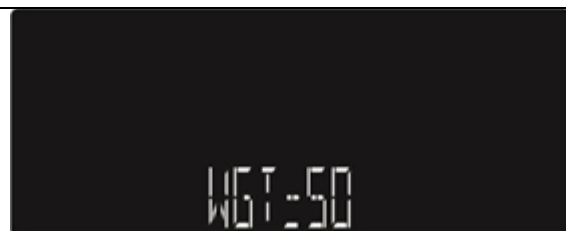


Fig. 7

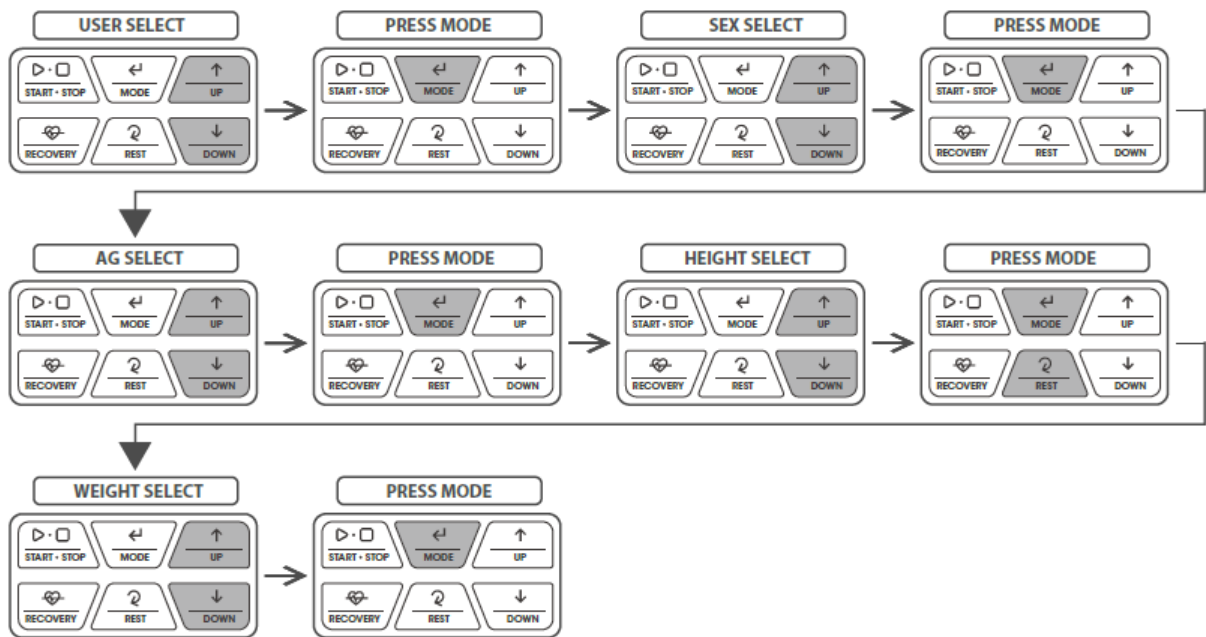

- The LCD display will show MANUAL (Fig. 8), the user can use the navigation buttons to select programs WATT (Fig. 9) – H.R.C (Fig. 10) – USER (Fig. 11) – PROGRAM (Fig. 12) – MANUAL. Confirm program selection by pressing MODE.



Fig. 8



Fig. 9



Fig. 10

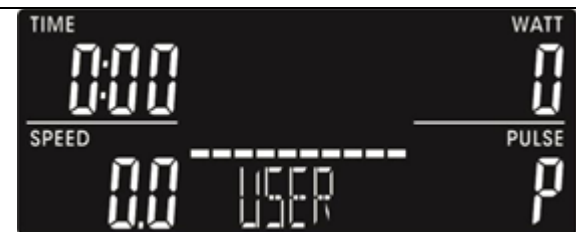


Fig. 11



Fig. 12

## Manual program

- Press START/STOP to start the program immediately.
- Use the navigation buttons to select MANUAL, confirm the program by pressing MODE/ENTER.
- Press the navigation buttons to set the load (fig. 13), confirm the load by pressing MODE.
- Using the navigation buttons, you can set target values for: time (Fig. 14), distance (Fig. 15), calories (Fig. 16), heart rate (Fig. 17).
- Press STAR/STOP to start the program (Fig. 18). The user can set the load during the exercise. The current load is shown on the display.
- You can pause the program during the exercise by pressing START/STOP, all values will be displayed. The pulse will continue to be detected. Press RESET to return to the main menu.

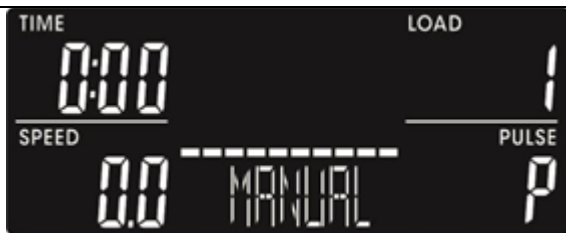


Fig. 13

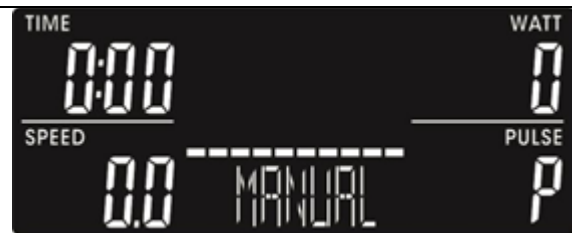


Fig. 14

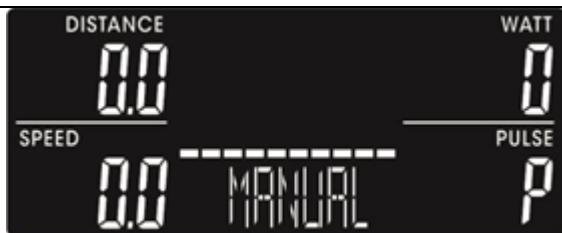


Fig. 15

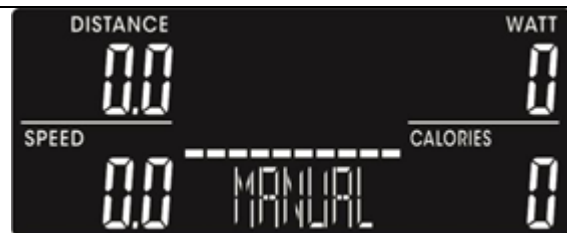


Fig. 16



Fig. 17


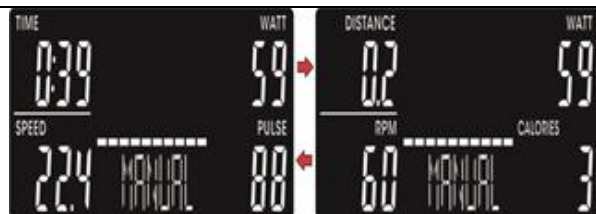


Fig. 18

Press START to get started, do not set up any target value.

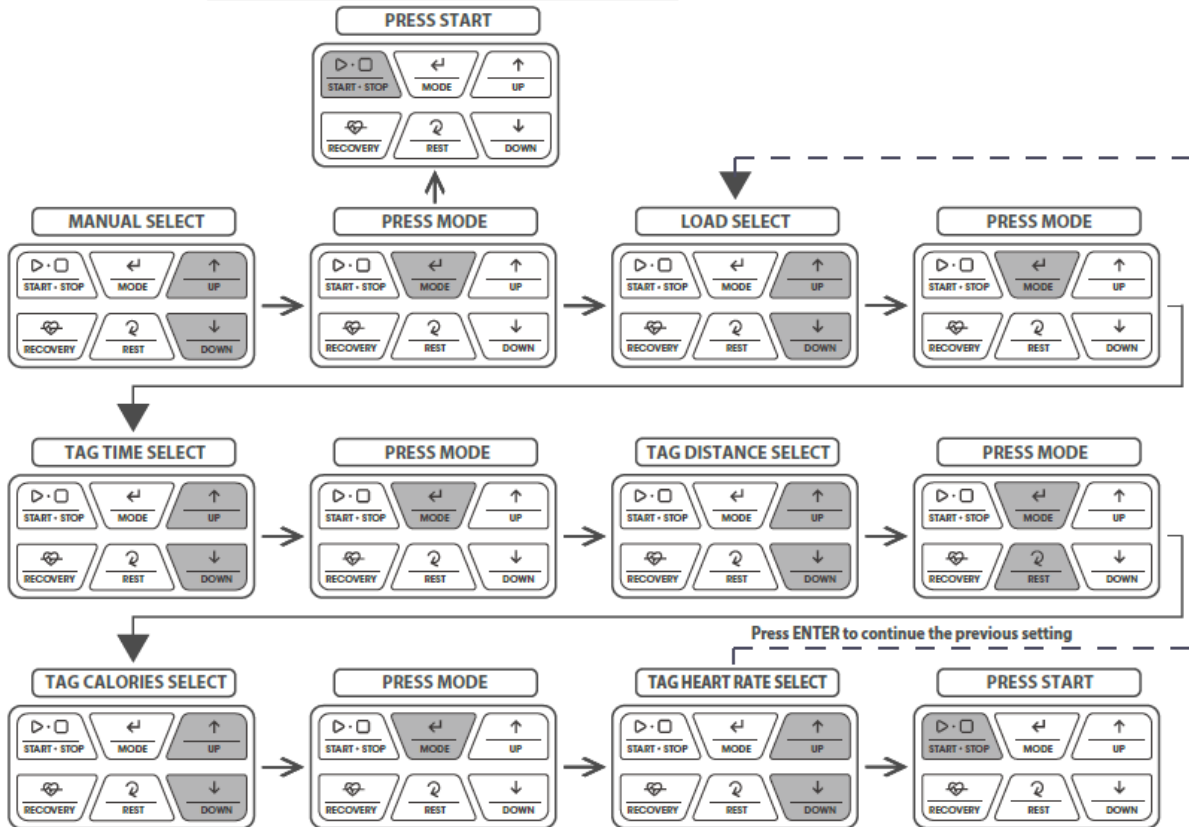


### WATT program

- Use the navigation buttons to select the WATT program, confirm by pressing MODE (fig. 9).
- The WATT value will flash, set the value (the original value is 120, Fig. 19). Adjust the value using the navigation buttons. Press MODE to confirm the value. You will pass the time setting.
- Use the navigation buttons to set the time, press START/STOP to start the program.
- After starting, the load will be adjusted according to the set value of the target power. The user can also change the value using the navigation buttons.
- You can pause the program during the exercise by pressing START/STOP, all values will be displayed. The pulse will continue to be detected. Press RESET to return to the main menu.



Fig. 19



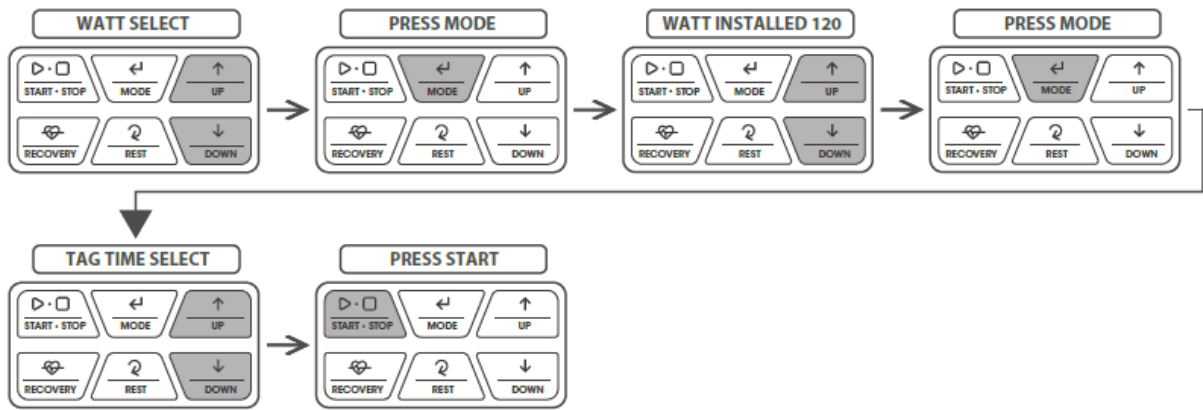

### HRC program

- Use the navigation buttons to select the HRC program (Fig. 10). Confirm by pressing MODE.
- Use the navigation buttons to select the values 55%, 75%, 90% and TARGET (Fig. 20 ~ 23). The original value is calculated from the entered age in the profile and will be displayed on the PULSE display.
- Use the navigation buttons to set the target value (30~230). Then press MODE. Go to time settings.
- Use the navigation buttons to set the time. After setting the time, press STAR/STOP, the load will change according to your current heart rate.
- You can pause the program during the exercise by pressing START/STOP, all values will be displayed. The pulse will continue to be detected. Press RESET to return to the main menu.



Fig. 20




Fig. 21



Fig. 22



Fig. 23

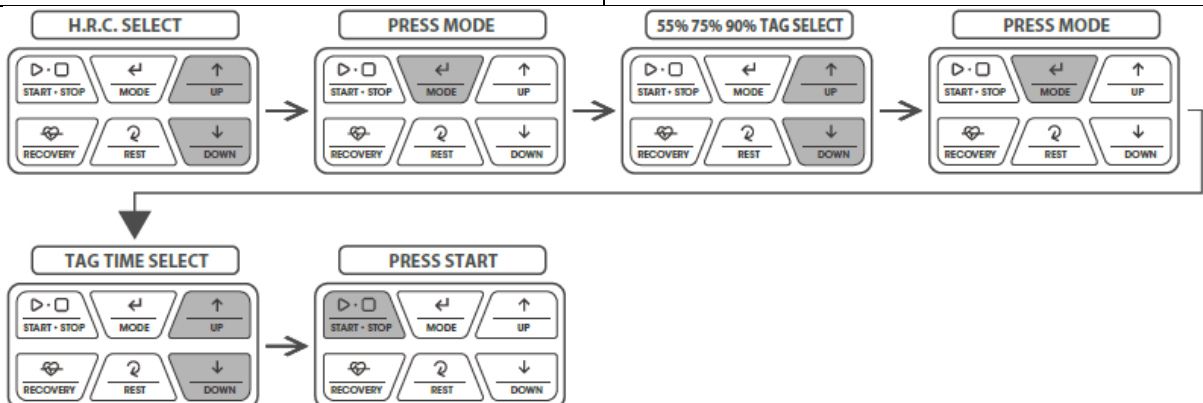

## USER program


- Use the navigation buttons to select USER (fig. 11), confirm by pressing MODE (fig. 24).
- Use the navigation buttons to set the load (Fig. 25). Each value must be confirmed by pressing MODE. 10 segments need to be set. After setting all 10 segments, it is necessary to set the training time. If you do not set the load of all segments, the values from the last setting will be used.
- Set the training time using the navigation buttons.
- Press STAR/STOP to start the program. The user can set the load during the exercise. The current load is shown on the display.
- You can pause the program during the exercise by pressing START/STOP, all values will be displayed. The pulse will continue to be detected. Press RESET to return to the main menu.



Fig. 24



Fig. 25

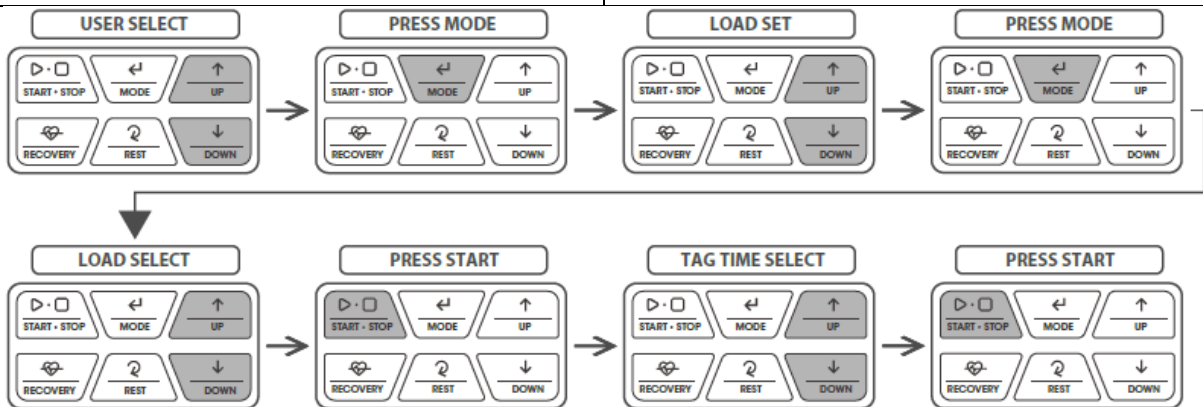

## 12 PRESET PROGRAMS


- Use the navigation buttons to select PROGRAM (fig. 12) and confirm by pressing MODE.
- Then select program P01, P02, P03, P04, ....., P12 (the programs are graphically indicated below).
- After selecting the program, the load values will flash, the original value is 1 (Fig. 27). You can adjust the value using the navigation buttons and confirm by pressing MODE.
- You can set values for time, distance, calories and heart rate.
- Press STAR/STOP to start the program. The user can set the load during the exercise. The current load is shown on the display.
- You can pause the program during the exercise by pressing START/STOP, all values will be displayed. The pulse will continue to be detected. Press RESET to return to the main menu.



Fig. 26



Fig. 27

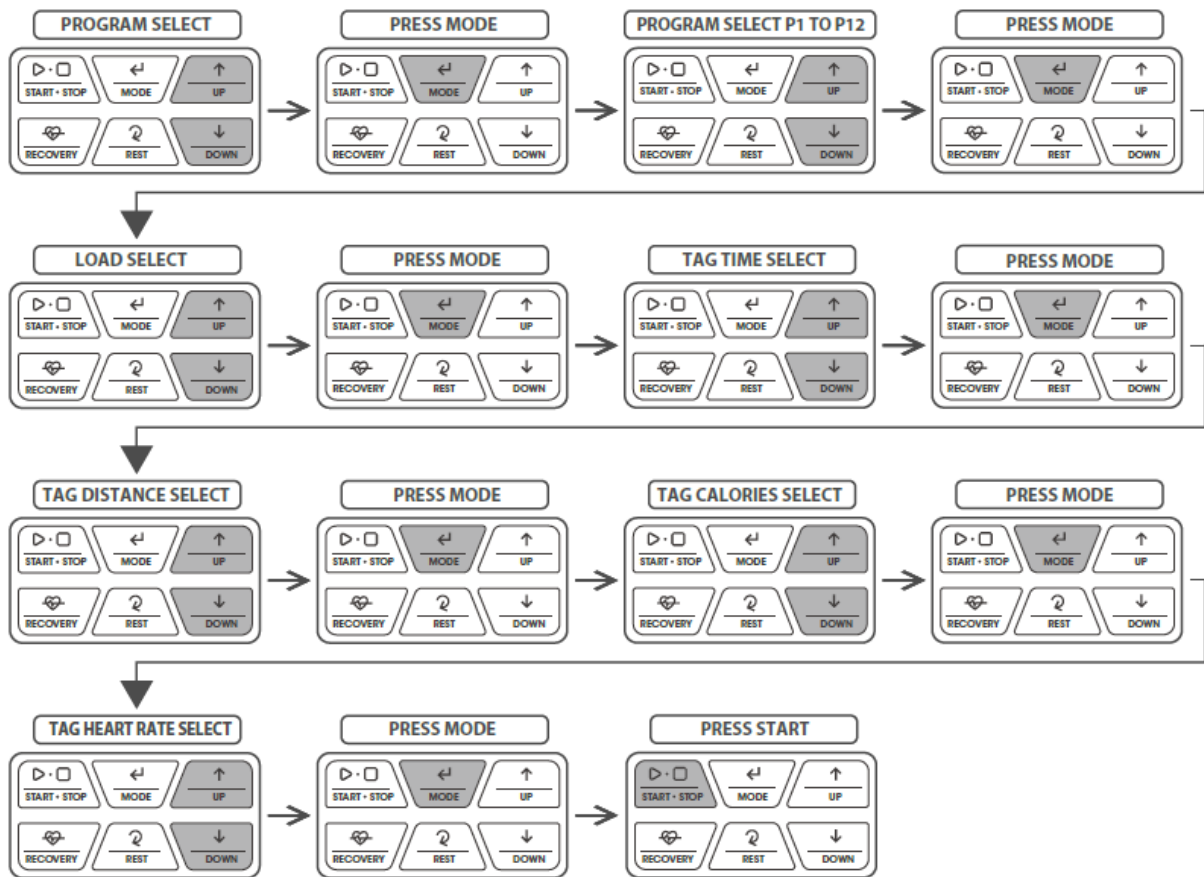

### RECOVERY program

- After your workout, wear the chest strap or grab the heart rate sensors and press RECOVERY. A countdown starts from 00:60 to 00:00 (Fig. 28). After the calculation is completed, the result F1 ~ F6 will be displayed (Fig. 29). F1 is the best result, F6 the worst.
- **WARNING!** A system for monitoring heart rate may not be accurate. Overloading during training may cause serious injury or death. If you feel any discomfort, immediately stop the exercise!

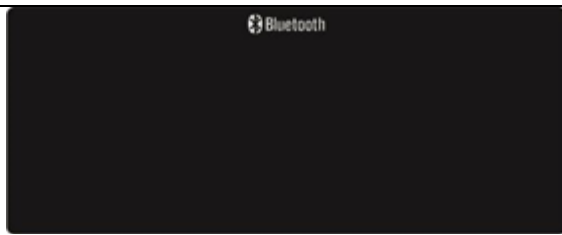


Fig. 28

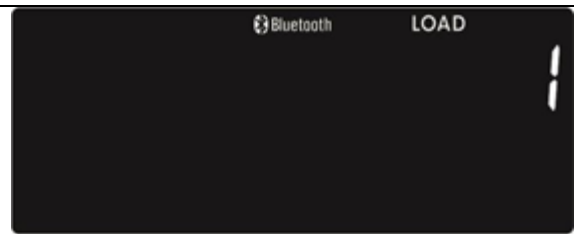


Fig. 29

## Bluetooth



Not connected (Fig. 31)



Connected (Fig. 32)

## Preset programs





## iCARDIO APPLICATION

- Download the iCARDIO app to your smart device.
- \*The application is compatible with Android 9 / iOS 13 and above systems




iOS




Android

- Start Bluetooth on your smart device.
- Start the application and enter the iCardio password, the password must be entered only the first time the application is launched.
- Pairing the iCardio app and the console
- Press the gear icon in the lower left corner.

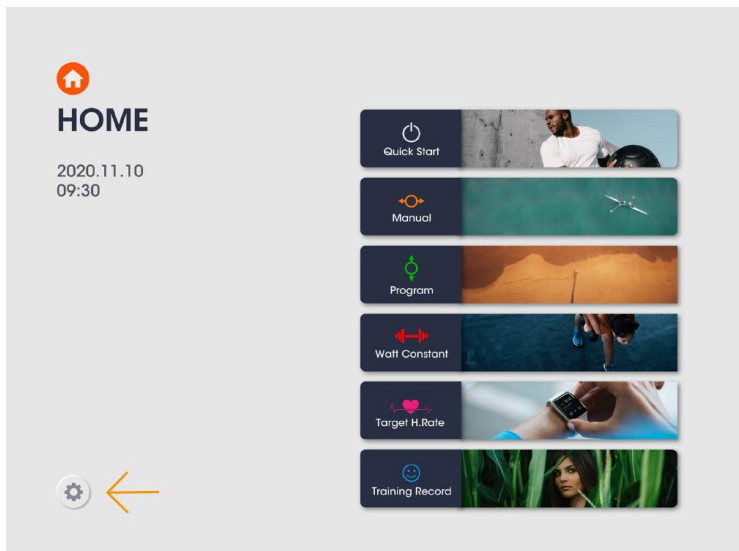


Tablet

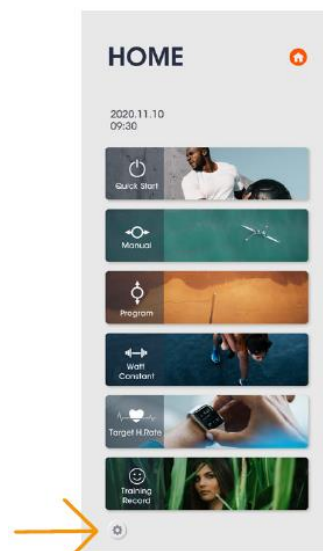


Smartphone

Select Bluetooth

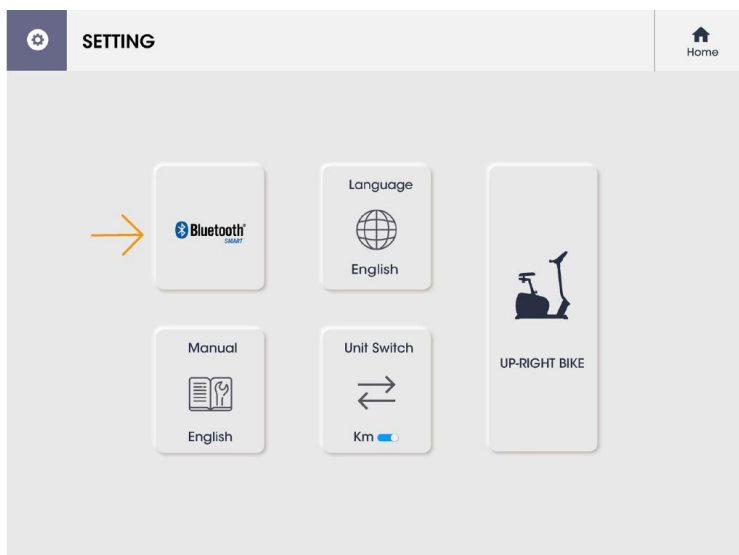


Tablet

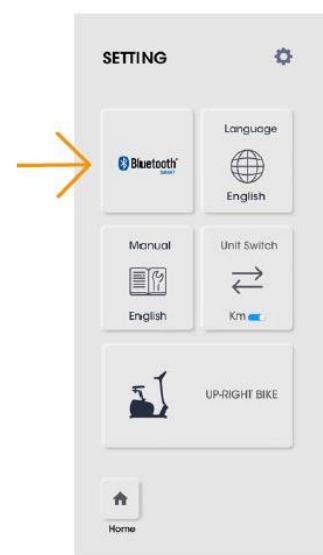

Smartphone


Check if the numbers on the back of the machine are identical to the number in the application, if so, confirm by pressing confirm.

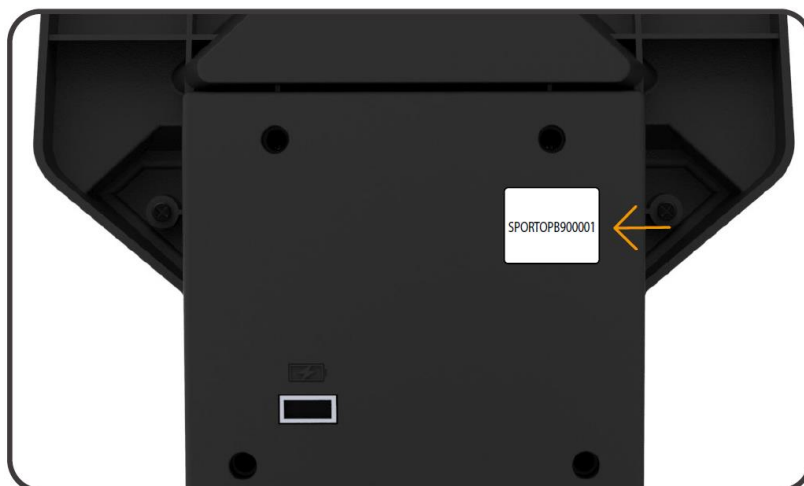



If the device does not appear in the application, try the following steps:

1. Press the arrow icon in the lower right corner.

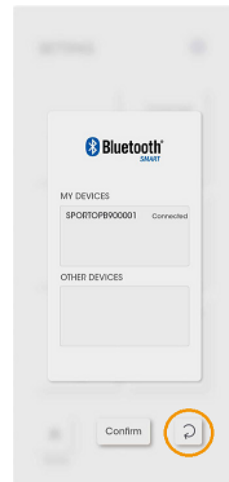

2. Unplug and plug in the machine adapter.



3. Restart your smart device.




\*Make sure Bluetooth is turned on on your smart device.


\*If none of the three options above work, contact the service center.

### Changing the language


Press the icon in the left-hand corner.

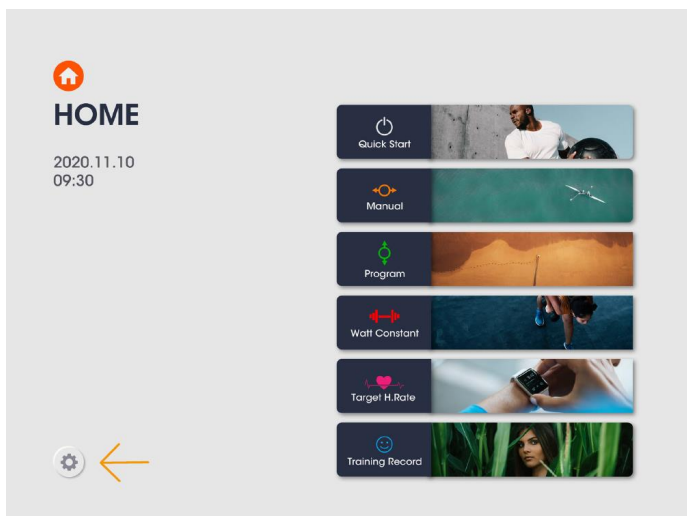


Tablet

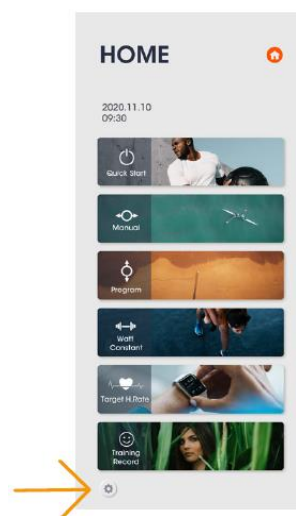


Smartphone

Press  and select language.

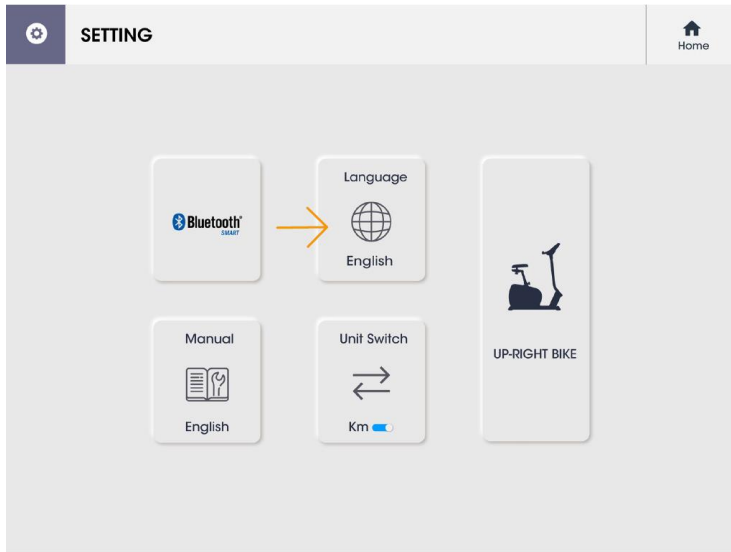


Tablet

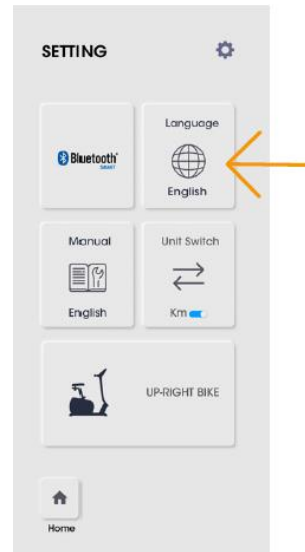


Smartphone

Manual for the iCardio application

Press the icon in the left-hand corner.

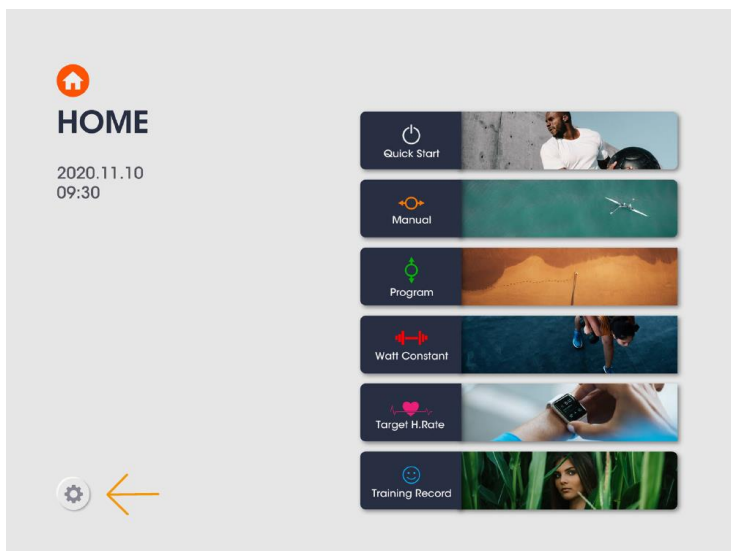


Tablet

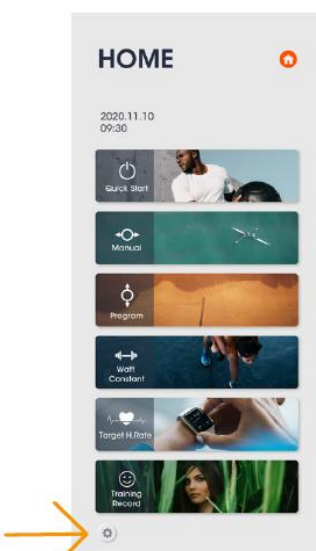

Smartphone

Press  .



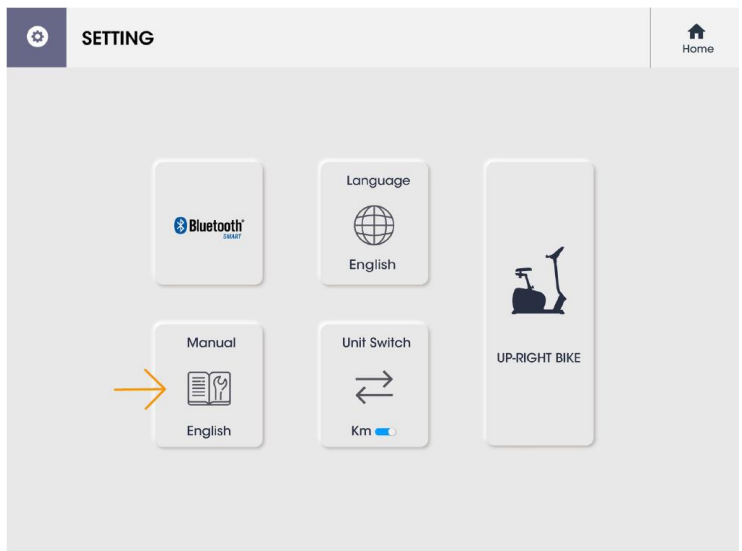

Tablet





Smartphone

\*The language of the manual changes according to the set language of the application.

Apart from the iCardio application, it is possible to pair the machine via Bluetooth with the KINOMAP and Zwift applications.

You can find apps in Google or Apple store. The applications are operated by a third party and the seller is not responsible for the operation or functionality of these applications.

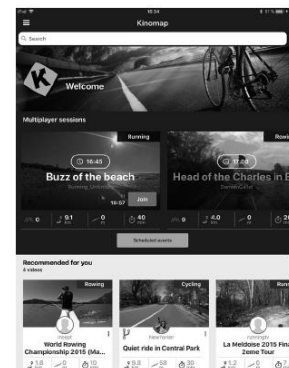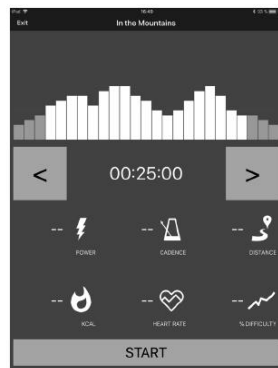

\*Once the app connects to the console, you will hear two short beeps.

\*Once the app disconnects from the console, you will hear one long beep.

# iCONSOLE APPLICATION



iOS




Android



In iConsole +, select MY TRAINING. Here you can see a summary of your training (total distance, total time, calories burned)


## SIGN IN

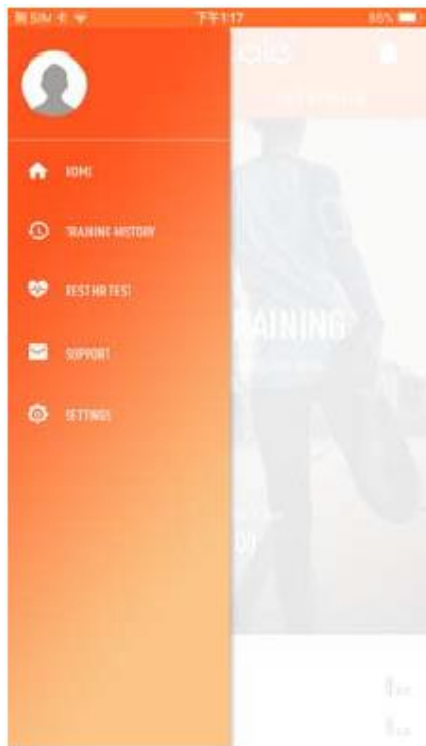

1. Choose your avatar on left side to enter profile settings



2. Log in with your Facebook, Gmail or WeChat account

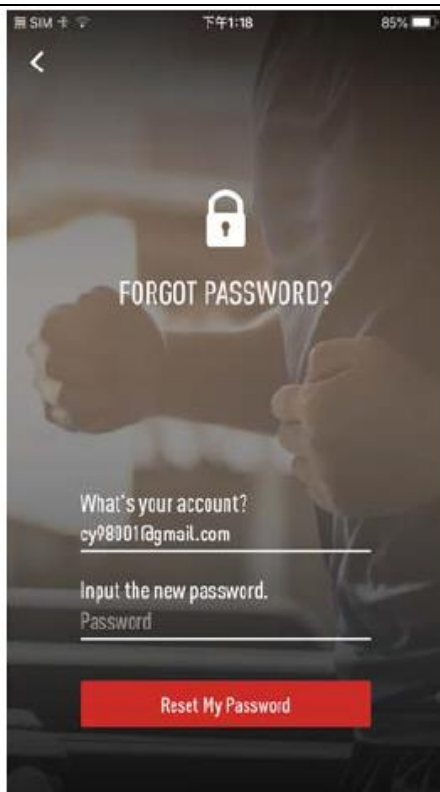

3. If you forgot your password you can choose Reset my password. Your new password will be send to your email.


## MEMBERSHIP

- Choose your profile picture to enter profile settings.
- You can change profile picture or update your profile information. (If don't enter all required information, calculated data may not be calculated correctly.)


## SIGN OUT

- Choose your profile picture to enter profile settings.
- Select the icon in the top right corner to sign out. (You can still **exercise** without signing in, but the data won't be saved.)

## HISTORY

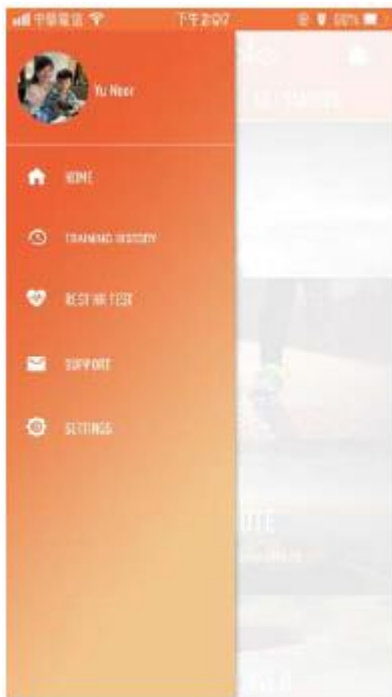

Select profile picture and then select TRAINING HISTORY.

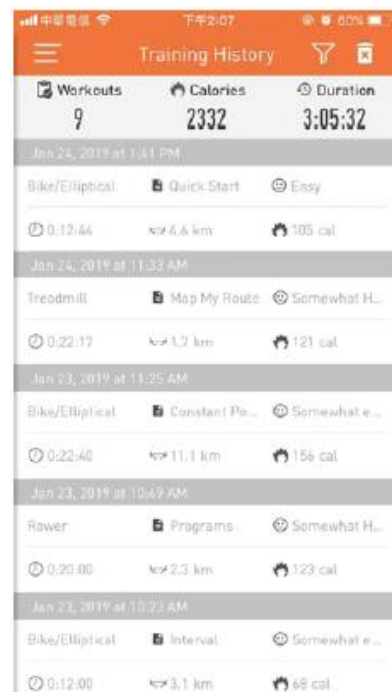

The measured data will be displayed: number of workouts, calories, training time and list of workouts.

Choose  to delete data.

Used device, program, RPM, time, distance and calorie data are recorded.


Select a workout to display the information.

Data from all devices and programs are stored.




## REST HR TEST


**WARNING!** A system for monitoring heart rate may not be accurate. Overloading during training may cause serious injury or death. If you feel any discomfort, immediately stop the exercise!

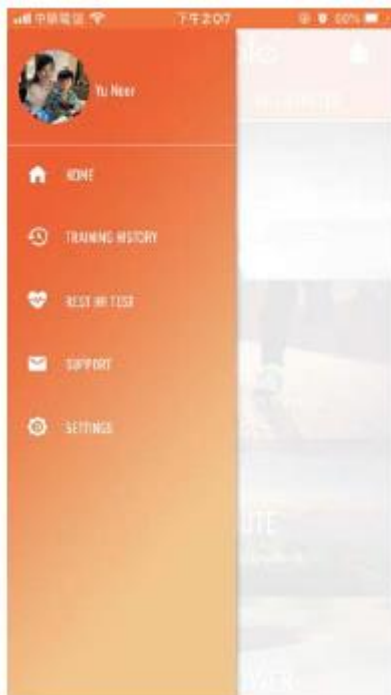

Select your profile picture to expand the menu.  
Select REST HR TEST.

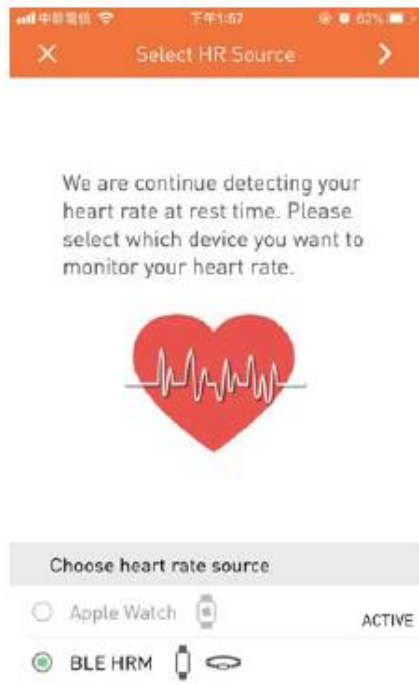


Select source: Apple watch or BLE HRM

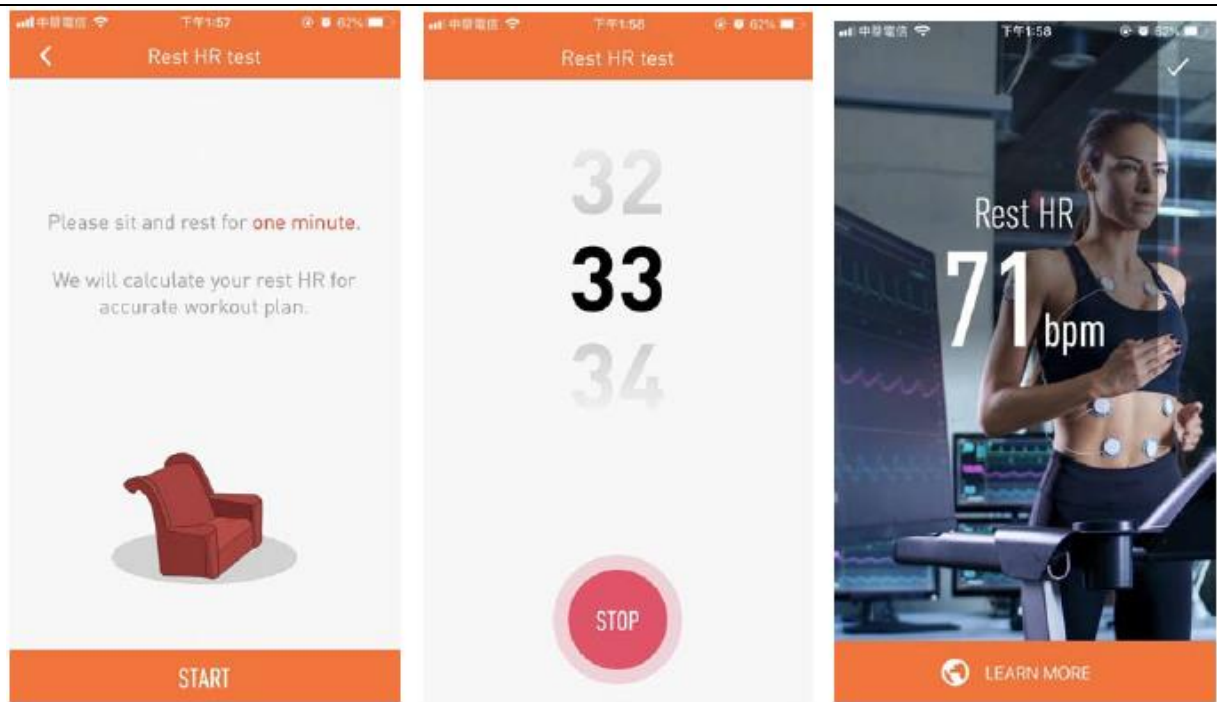


After connecting, select START and 60s countdown will begin. After the countdown, the rest heart rate is displayed at and the heart rate is calculated for the most accurate training program.

## SUPPORT

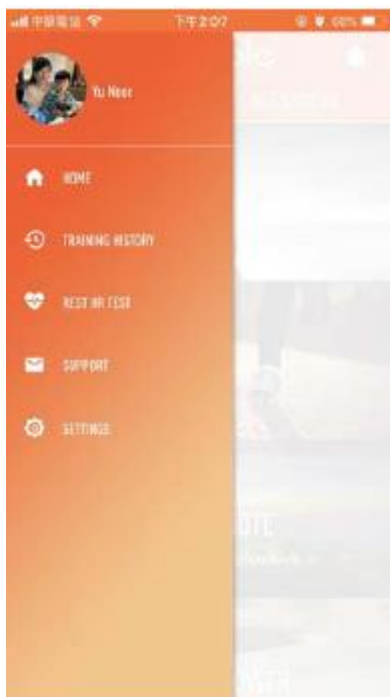


Select your profile picture to expand the menu.  
Select SUPPORT.


## SETTING

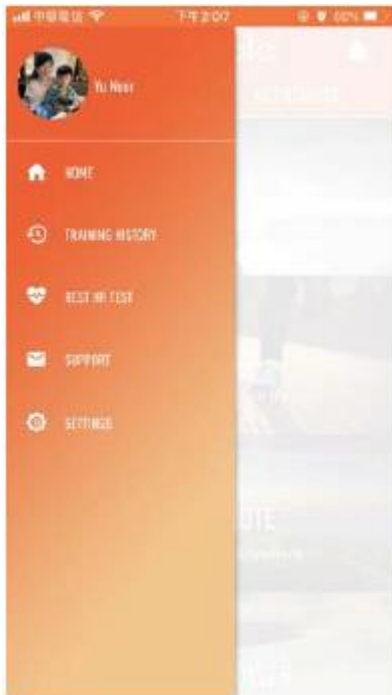

Select your profile picture to expand the menu.  
Select SETTING.

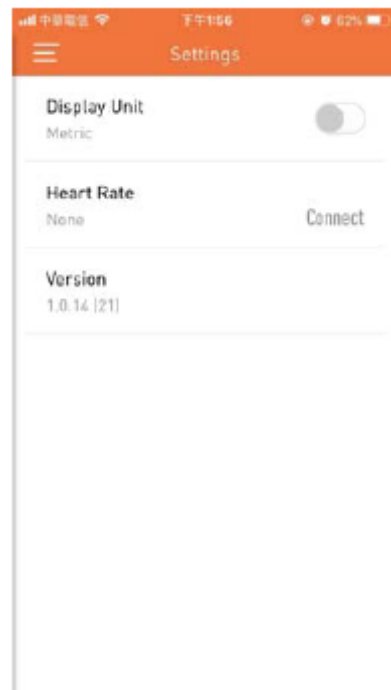


Select unit: metric or imperial.

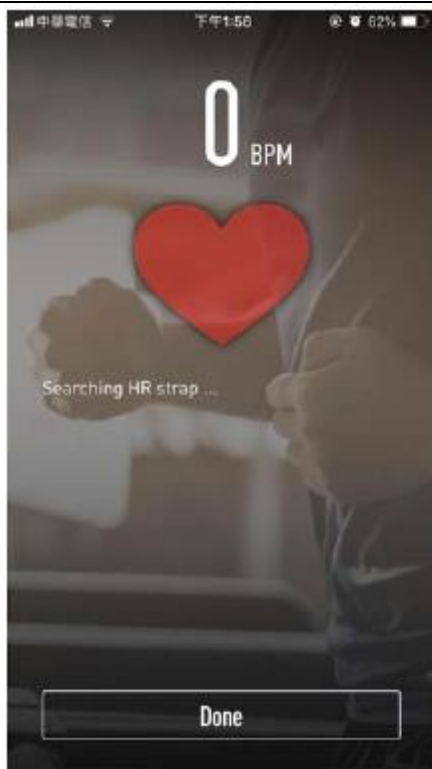

Select source: Apple watch or BLE HRM



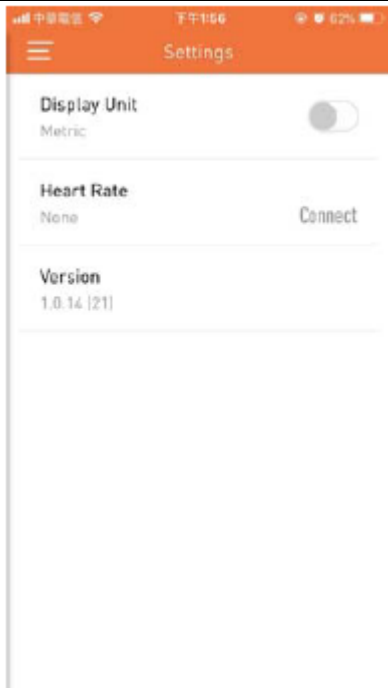


Check the program version

## QUICK START



1. Bluetooth connection: Select the device you are using. If you are using a heart rate monitor, you can select it below.
2. Once the devices are paired, click > icon in the top right corner.
3. If you cannot find the device, make sure that Bluetooth is turned on. Next connection is automatic.



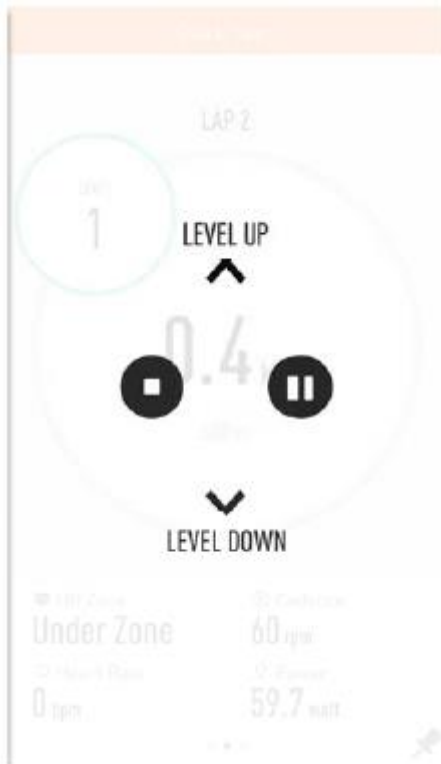

4. After turning on the program, you can adjust the load or pause / stop the program.




5. Select the pin icon to pin the data.
6. When you finish the exercise a summary of the exercise is displayed. You can compare the results with previous workouts.

## INTERVAL



1. You can select the number of repetitions (interval cycles) (number in green circle), time (exercise time and rest time), level, target RMP, select go to start the program

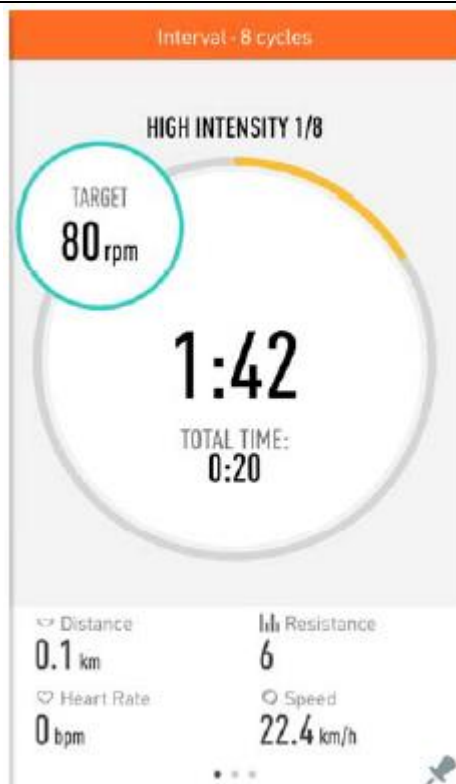

2. After turning on the program, you can set the load or pause / stop the program.



3. Select the pin icon to pin the data.



4. When you finish the exercise a summary of the exercise is displayed. You can compare the results with previous workouts.

## MAP MY ROUTE



1. Select a location.
2. Select a start point.
3. Select the route and swipe the yellow GO button to the left. You can reset the route with the green button.




4. If you do not want to set the route yourself, you can select one of the preset routes. You can choose between China routes or worldwide routes.



5. After turning on the program, you can set the load or pause / stop the program.
6. Select the arrows to show or hide the menu. Select the diamond icon to change the map view.
7. When you finish the exercise a summary of the exercise is displayed. You can compare the results with previous workouts.

# CONSTANT POWER

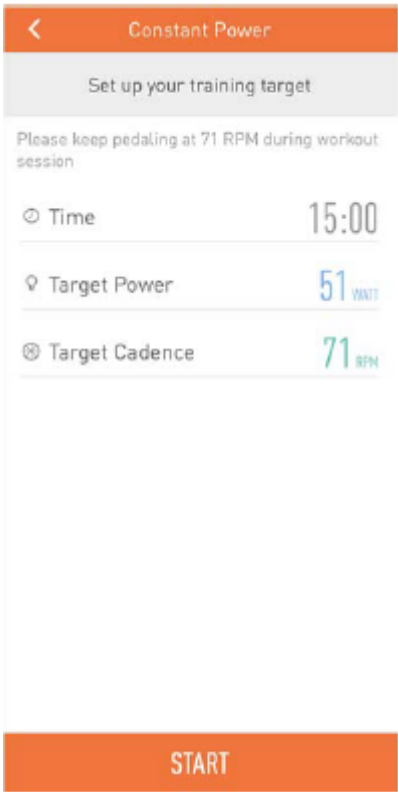


1. After pairing with Bluetooth, set time, target power, target RPM, target cadence




2. Training graphs are displayed, select one of the two graphs (Cadence / Power). The following information is displayed or by pinned with the pin button



3. Touch the display to pause or stop the training.

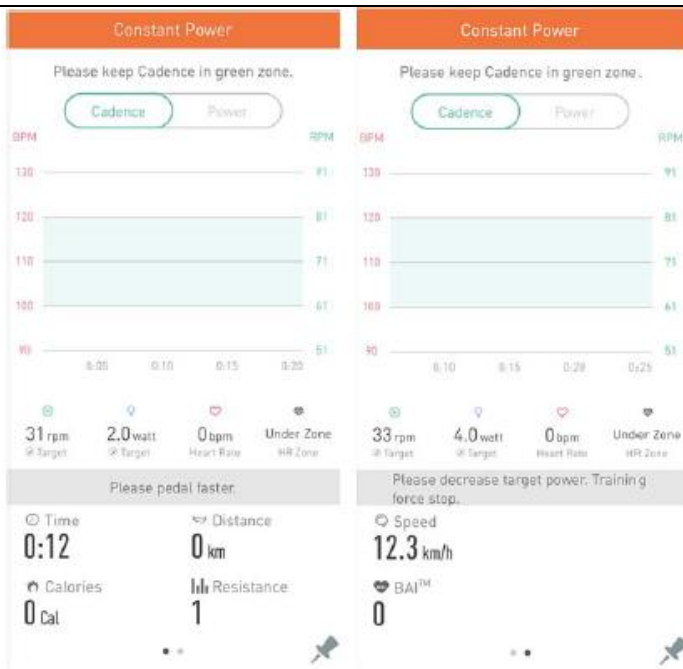


4. Workout at constant speed.

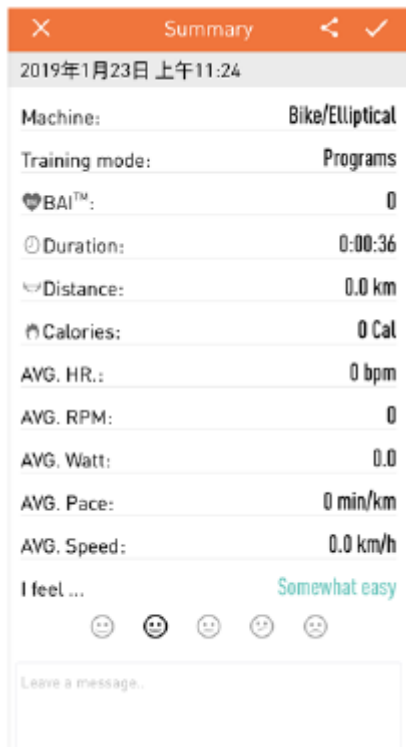


- When you finish the exercise a summary of the exercise is displayed. You can compare the results with previous workouts.


## PROGRAMS

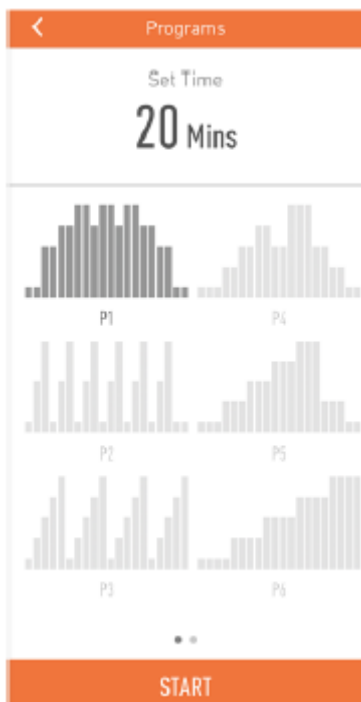

- After pairing with Bluetooth, select the program. 12 preset programs are displayed.

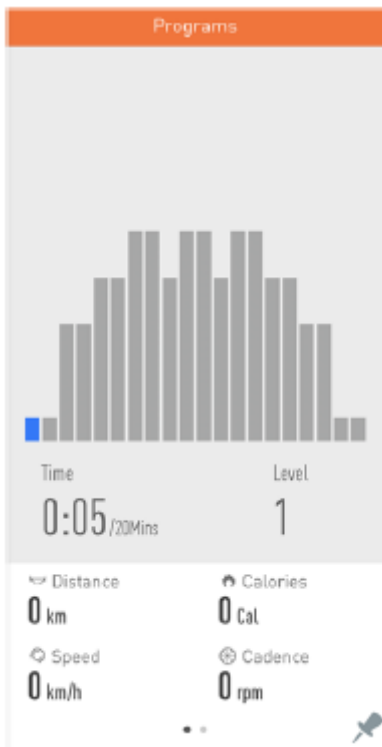


2. The display shows the progress of the training.
3. Select the pin icon to pin the data.

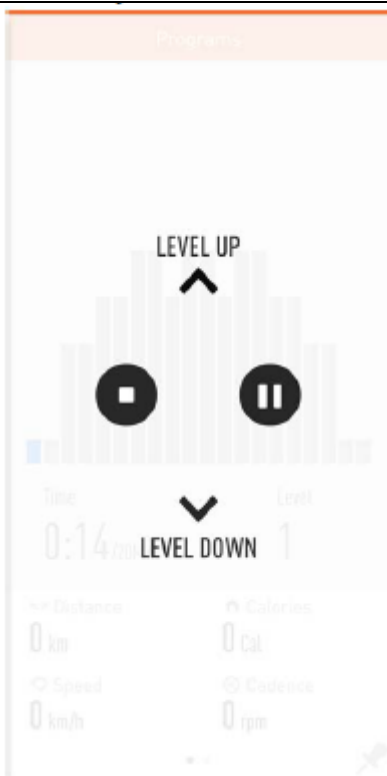


4. Touch the screen to stop or pause the program or select the load.



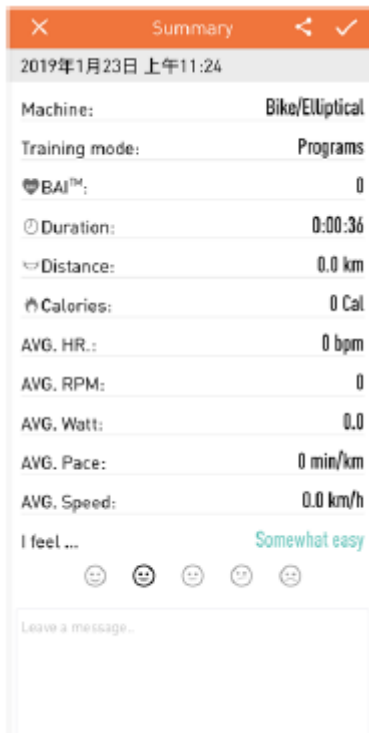

5. When you finish the exercise a summary of the exercise is displayed. You can compare the results with previous workouts.


## AI TRAINING

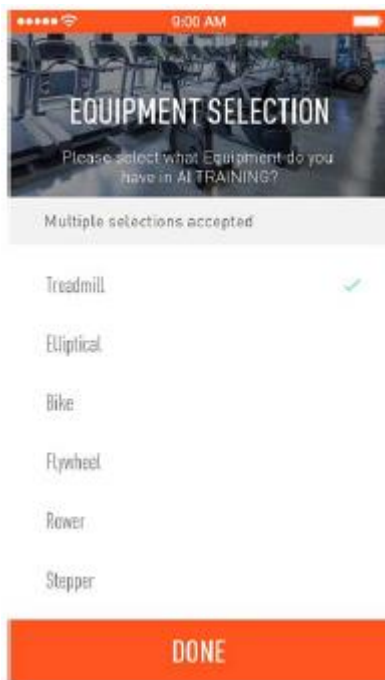


1. After pairing with Bluetooth, select the machine (you can select multiple machines).



2. Select your goal / program

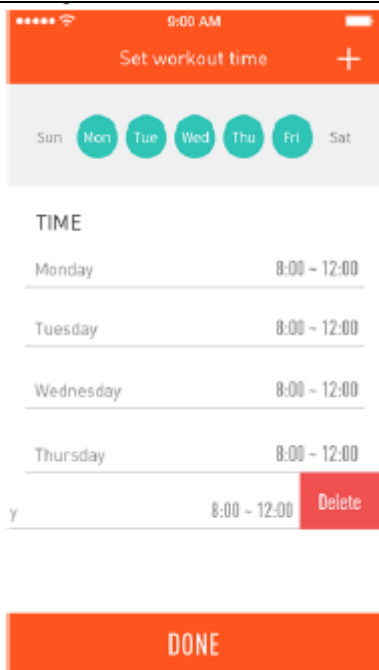

3. Set your schedule.

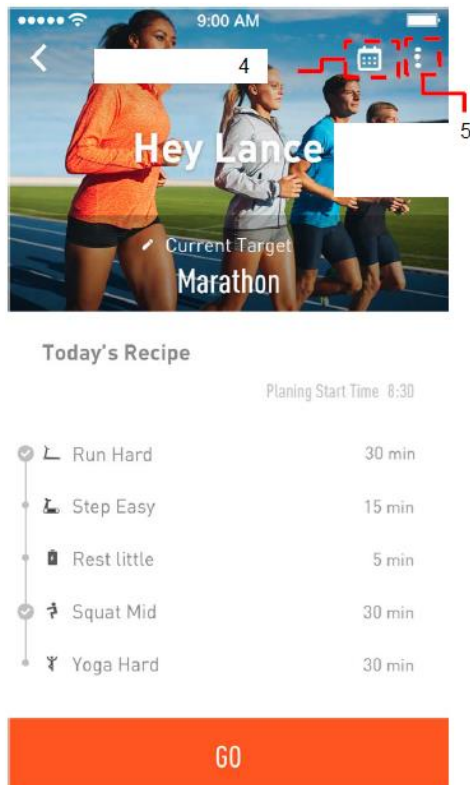

4. Training Overview

5. Training time, machine and goal / program change

## GYM CENTER

In GYM CENTER, the user can download various training programs.

1. Download the selected program
2. Turn on iRoute + program
3. For iRoute + (Google Maps) training, the user must have wifi on and be logged in.

## USE

Exercise on the exercise bike is based on very simple movements, but you will surely fall in love with them. Thanks to simplicity of the exercise on the exercise bike in can be done by elderly people. Prior to exercise, it is necessary to adjust the height of the saddle. It is important that you sit comfortably. The bicycle saddle must be set so that you can hold the ergonomically shaped handles when sitting. You should not have fully extended hands. You can damage your muscles.

To ensure a comfortable and comfortable exercise, put your feet on the pedal. Nowadays, all modern pedals are equipped with straps for fastening and stabilizing of the foot. It is important for your foot to be firmly and safely positioned during exercise.

The basis of exercising on a bicycle is that the legs are moving on a specific elliptical path. This movement is very similar to cycling. When doing exercise on a bicycle, you just sit on the saddle with the right height, keep your feet firmly in the pedals, hold the ergonomically shaped handles and exercise.

It is advisable at the beginning to choose a lower load. If you exercise at regular intervals on an exercise bike, you can gradually increase the load. You can increase the load gradually over a week or two weeks. Selecting a high load during the start of training can lead to rapid fatigue and muscle damage.

When exercising, it's important to choose the right load and the right tempo. Try to keep it throughout the exercise. It is not recommended to choose a high pace right from the start. Increase tempo after about a week of regular exercise. The high pace is not equal to the faster burning of calories. Correct calorie burning is reflected in an appropriate and regular exercise. At the beginning of the exercise, the

number of burned calories may seem low, but regular and appropriate exercise is the key to achieving the best results.

Exercise on the exercise bike also leads to the formation of muscles. It is mainly used to strengthen the thigh and calf muscles. While exercising on a bicycle, you also move your buttocks.

If you want to exercise right, you should not forget to breathe properly. Proper and regular breathing is recommended in any exercise. It is important to keep regular deep inhales and exhales. Regular and proper breathing during exercises on the exercise bike involves intense exercise of the abdominal muscles. It is advisable to practice 30-35 after consuming food. Failure to do so may result in less calories burned, and in older age even lead to digestive problems.

For best results, you should also consider your diet. It is recommended to start a day of eating sweet food and pastries or muesli with milk. For lunch is recommended to eat a caloric richer meal. Do not forget about the soup. In the evening, light meals are recommended. If you want to improve your health, it's not just a regular exercise but a whole diet.

Bicycle exercise is an effective exercise for all busy people. Exercise on the exercise bike is effective in strengthening muscles, especially thighs, calves and buttocks. Regular exercise can lead to a slimmer figure. Exercise is recommended not only as a winter training for cyclists but also for people who want to burn excess calories. Regular breathing, regular exercise, reasonable tempo, and balanced diet can lead to your desired results.

## **CORRECT BODY POSTURE**

When training, keep your body upright, or you can learn your hand on your forearms. During pedaling, you should not have your legs fully extended. Your knees should be slightly bent when fully pressing down the pedal. Keep your head straight with your spine to minimize the pain of the cervical muscles and upper back muscles. Always exercise fluently and rhythmically.

## **MAINTENANCE**

- When assembling, tighten all screws and adjust the bike to the horizontal position.
- Check the screws after 10 hours of use.
- Wipe the sweat after the exercise. Clean the device with a cloth and gentle cleanser. Do not use solvents or aggressive cleaners on the plastic parts.
- When noise is increased, it is necessary to check that all joints are tightened properly.
- Place the product in a clean, ventilated and dry room.
- Do not expose the device to direct sunlight.

## **STORAGE**

Keep the exercise bike in a clean and dry environment. Make sure the power switch is turned off and the exercise bike is not plugged into the power socket.

## **IMPORTANT NOTICE**

- This exercise bike comes with standard safety regulations and is only suitable for home use. Any other use is prohibited and may be dangerous to users. We are not responsible for any injury caused by improper and forbidden use of the machine.
- Consult your doctor before starting training on the exercise bike. Your doctor should evaluate whether you are physically fit to use the machine and how much effort you are able to undergo. Incorrect exercise or switching of the body can harm your health.

- Carefully read the following tips and exercises. If you experience pain, nausea, breathing, or other health problems during exercise, immediately stop the exercise. If the pain persists, contact your doctor immediately.
- This exercise bike is not suitable as a professional or medical purpose. It can also not be used for healing purposes.
- The heart rate monitor is not a medical device. It provides only approximate information about your average heart rate, and any suggested pulse rate is not medically binding. Accumulated data may not always be accurate regarding uncontrollable human and environmental factors.

## ENVIRONMENT PROTECTION

After the product lifespan expired or if the possible repairing is uneconomic, dispose it according to the local laws and environmentally friendly in the nearest scrapyard.

By proper disposal you will protect the environment and natural sources. Moreover, you can help protect human health. If you are not sure in correct disposing, ask local authorities to avoid law violation or sanctions.

Don't put the batteries among house waste but hand them in to the recycling place.

## TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

### General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated here under determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 89/2012 Coll. Civil Code, and Act No. 634/1992 Coll., Consumer Protection, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Strakonická street 1151/2c, Prague 150 00, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

“The Buyer who is the End Customer” or simply the “End Customer” is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

“The Buyer who is not the End Customer” is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

### Warranty Conditions

#### Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

### Batteries

6-month battery warranty – we guarantee that battery's nominal capacity does not fall below 70% of its total capacity within 6 months of the product's sale.

**The Warranty does not cover defects resulting from (if applicable):**

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints, wear of brake pads/blocks, chain, tires, cassette/multi wheel etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

### **Warranty Claim Procedure**

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.

#### **CZ SEVEN SPORT s.r.o.**

Registered Office: Strakonická 1151/2c, Praha 5, 150 00,  
ČR

Headquarters: Dělnická 957, Vítkov, 749 01

Warranty & Service: Čermenská 486, Vítkov 749 01

CRN: 26847264

VAT ID: CZ26847264

#### **About shipping**

Phone: +420 556 300 970  
E-mail: eshop@insportline.cz  
reklamace@insportline.cz  
servis@insportline.cz

Web: www.inSPORTline.cz

**SK**  
**inSPORTline s.r.o.**

Headquaters, warranty & service center: Električná 6471,  
Trenčín 911 01, SK

CRN: 36311723  
VAT ID: SK2020177082

Phone: +421(0)326 526 701  
E-mail: objednavky@insportline.sk  
reklamacie@insportline.sk  
servis@insportline.sk

Web: www.inSPORTline.sk

