



Ultimate Fun • Maximum Safety



INFLATABLE LEISURE & FISHING BOATS

User's Guide

Motion BT-88820/88821
WildRiver BT-88822/88823

WWW.SILVERMARINE.COM



Thank You For Choosing Aqua Marina leisure and fishing boats



You'll love our inflatable leisure and fishing boats. Every Aqua Marina® inflated boat is easy to inflate and deflate, without the storage and care concerns of other boats. Choose from a wide selection of inflatable rafting and fishing boats, each combining rugged, reliable construction with the comfort and convenience that is synonymous with the Aqua Marina reputation for premium quality.

This manual has been compiled to help you achieve long term safe use and pleasure from your Aqua Marina® boats.

GENERAL INFORMATION

SAFETY

In a manual of this type it is impossible to give adequate space to the topic of water safety. Check in your local area for information and/or training as needed. Inform yourself about local regulations and dangers related to boating and/or other water activities. It is your responsibility to be aware of and comply with all relevant safety regulations. For all water recreation or sport you should have a reasonable swimming ability. Just as swimmers have a cardinal rule about not swimming alone. It is strongly advised that you should never go boating alone.

PLEASE KEEP THIS MANUAL IN A SECURE PLACE, AND HAND IT OVER TO THE NEW OWNER WHEN YOU SELL THE CRAFT. RECORD THE "HULL IDENTIFICATION NUMBER" (HIN) WHICH IS PRINTED ON THE BOAT'S HULL IN THE FOLLOWING BOX:

CN-ORP

MANUFACTURER'S CERTIFICATION

Our boats comply with ISO 6185 standard established by the International Organization for Standardization.

MANUFACTURER'S RECOMMENDATION

The total number of persons, motor power and total weight shall not exceed the limits labeled (Fig. 1) on the boat.

EN ISO 6185 PART 1 TYPE II		STANDARD	EN ISO 6185-1:2009
DESIGN CATEGORY D		BOAT TYPE	TYPE II
Do not over inflate or use high pressure air compressor to inflate. Adults should inflate the chambers to maximum pressure. Consult the pressure label to check inflation. Ensure even distribution of pressure on both or the boat. Fit without air only.		DESIGN CATEGORY	D
WARNING: This is not a life saving device. Use only under competent supervision. Always use an approved life cushion. Do not use in high wind, rapid currents, open water or dangerous rocks. Be familiar with area where you intend to use boat. Never allow sliding into or from the boat. Never lean or sit over the edge when not in use. Follow these rules to avoid poisoning, overdose or other serious injury. Not for use by children without adult supervision. Do not overheat. Not intended for winter water use. The storage of battery acid is dangerous. Wear and follow local water safety rules & boating regulations.		BOAT MODEL	RF8662D
①		= 2 = 6	③
②		= 150kg (400lbs) = 500 W	④
		= 0.04bar (0.58psi)	⑤
		CN-ORP	⑥
		DATE	⑦
MADE IN CHINA			

Fig.1

1. 94/25/EC as amended by Directive 2003/44/EC boat design category
Design Category D "SHELTERED WATERS"
Designed for voyages on sheltered coastal waters, small bays, small lakes, rivers and canals when conditions up to, and including, wind force 4 and significant wave heights up to, and including, 0,3 m may be experienced, with occasional waves of 0,5 m maximum height, for example from passing vessels.
2. Country of origin
3. Maximum person's capacity
4. Manufacturer's recommended maximum load capacity
5. Manufacturer's recommended working pressure
6. Hull identification number (HIN)
7. CE mark, manufacturer's name and address
8. Maximum motor power

SAFETY CHECK LIST & SAFETY WARNING

- Not a life saving device.
- Not for use by children without adult supervision.
- Always wear an approved Personal Flotation Device (Life Preserver).
- Do not overload.
- Never tow from another boat or vehicle.
- Use only in water away from debris and obstructions.
- Do not use in high wind, strong currents, open water or dangerous tides.
- Be familiar with the area you intend to use the boat.
- Never allow diving into or from these boats.
- Never leave in or near water when not in use.
- Know and follow local water safety rules and boating regulations.
- Use only in protected waters.
- Do not use this product under the influence of alcohol or drugs.
- Do not over inflate.

INFLATABLE BOAT SPECS & FEATURES


SPECIFICATIONS

Boat Model	Category	Size	Air pressure	No. of air chamber	Max passenger	Max payload	Max power allowed	Net weight (boat)
BT-88820 /88821	D	2.55x1.25m (8'6"x4'2")	0.04psi -0.58bar	2+1	2(or 1+2)	185kgs	500W	9kgs/12kgs
BT-88822 /88823	D	2.83x1.52m (8'6"x4'2")	0.04psi -0.58bar	2+2	2+1	225kgs	500W	9.5kgs/12.5kgs

STANDARD EQUIPMENT

Model	Storage bag	Aluminum oar set	8" Foot pump	Repair patch	Inflatable Seat	Electric Motor T-18
BT-88820	1 pc	1 pair	1 pc	1 set	1 pc	
BT-88821	1 pc	1 pair	1 pc	1 set	1 pc	1 pc
BT-88822	1 pc	1 pair	1 pc	1 set	2 pc	
BT-88823	1 pc	1 pair	1 pc	1 set	2 pc	1 pc

DESCRIPTION

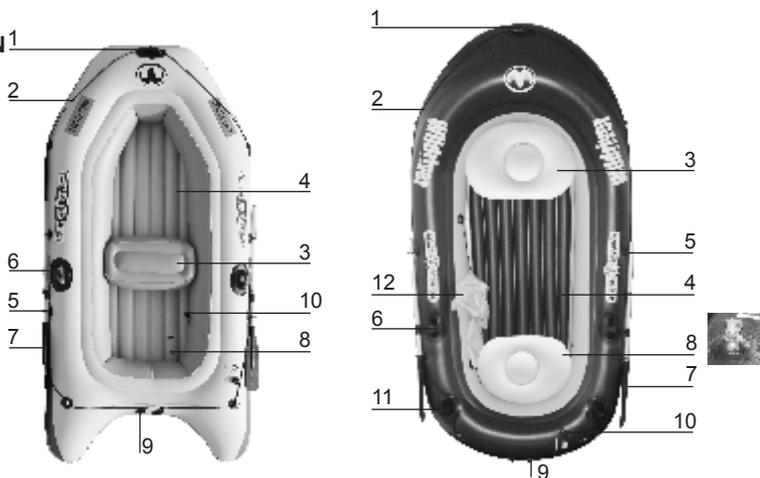

NOTE: Drawings for illustration purpose only. Actual product may vary. Not to scale.

1	Bow carry handle	2	All round grab line	3	Inflatable cushion seat
4	Inflatable I-beam floor	5	Oar lock	6	Oar holder
7	Aluminum oar	8	Inflation valve	9	Electric motor connector
10	Boston screw valve	11	Fishing rod holder (for WildRiver only)	12	Gear pouch or accessory bag (for WildRiver only)

SET UP INSTRUCTION

UNFOLD THE BOAT

Choose a smooth and clean surface to spread the boat out so that the inflatable chambers can fill easily.



BOSTON SCREW VALVE OPERATION

Follow the instructions below for valve operation and correct inflation and deflation procedures.

1. Double valve cap (valve lets air in, not out). (Fig.1)
2. Quick deflation cap. (Fig.2)
3. Unscrew double valve cap. (Fig.3)
4. Insert output end of air pump into valve and fill. (Fig.4)
5. To deflate, unscrew quick-deflation cap. (Fig.5) **CAUTION:** Double valve does not operate when this cap is off. Do not unscrew this cap while boat is in water.



Fig.1/2



Fig.3



Fig.4



Fig.5

INFLATION VALVE OPERATION

1. Open external cap and pull firmly to extend out. (Fig.1)
2. Attach suitable adapter nozzle to inflation end of pump. Insert pump and start pumping. (Fig.2)
3. When fully inflated, gently twist adapter sleeve to right while backing pump out of valve. (Fig.3)
4. Fully remove adapter and close external stopper. Valve should appear depressed into itself. (Fig.4)



Fig.1



Fig.2



Fig.3



Fig.4

INFLATION STEPS

1. Inflate the chambers following the numerical sequence marked on the valves. It is very important to follow the numerical sequence; failure to do so will result in an improperly inflated boat.
2. Inflate the floor until it is stiff to the touch but NOT hard.
3. Inflate the hull. Fill each chamber until it is stiff to the touch but NOT hard.


NOTES:

Air temperature and weather condition do affect the internal air pressure of inflatable products. In cold weather the product will lose some pressure due to the fact that the air will contract. If this occurs, you may want to add a little air to the product. However, in hot weather, the air will expand. You must let some air out to prevent the product from failing due to overpressure.

- Only use Aqua Marina® approved inflation pumps.
- Never use motor-driven high-pressure air pumps as this may result in over-inflation. Fill with cold air only.
- Under and over-inflation will result in safety hazards.
- Never stand on or rest objects on the boat during inflation.
- Never open the cap of air valve while the boat is in use.
- Be sure the valve is tightly closed before using the boat.


FISHING ROD HOLDER USE

- Slide the end cap over the end of the fishing rod.
- Insert the fishing pole into the holder.

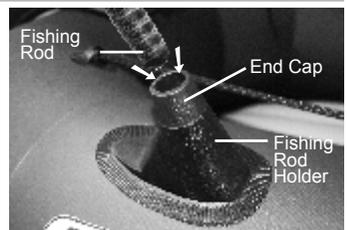



Electric motor T-18 installation (for BT-88821/88823 only)

- Release the small adjustable tension collar from electric motor
- Put stainless steel pipe into the upper and the lower buckle of the boat stern.
- Adjust to make sure the motor fits boat in place and firmly
- Fix the tension collar and tighten it.

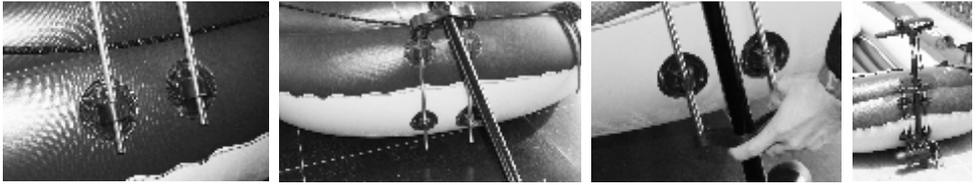

OAR ASSEMBLY

1. Insert the “shaft A” through the oar-lock first
2. Insert “shaft A” with the pin end into the “shaft B” with the blade towards outboard (water).
3. Double check and make sure the retainer ring onto the other end of the “shaft A”, from inside of the boat.
4. When the oars are not in use secure the oars onto the oar holders located on each side of the boat.

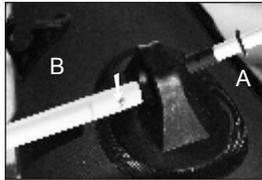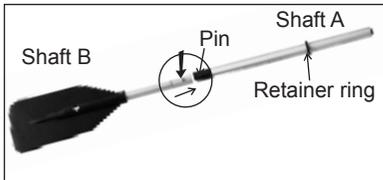


PRODUCT CARE AND STORAGE

The boat is made of the highest quality materials and complies with ISO 6185 standards. Altering the construction of the boat will endanger your own safety, safety of the occupants and void the limited warranty!

There is very little that you have to do to keep your boat in good condition for many years.

- When landing on the shore, carry the boat. Do not tow it on the sand or ground as damage may occur.
- If you use the tow rings to tow the boat, go slowly to avoid over-towing as damage may occur.
- Clean your boat after a trip to prevent damage from sand, salt water or sun exposure. Most dirt can be removed with a garden hose, a sponge and mild soap. Make sure the boat is completely dry before storing. Use as few cleaning agents as possible, do not discharge waste agents into water, and clean your boat preferably on land.
- Be sure your product is completely dry before storing.
- The products may be stored inflated, but do not place any heavy or sharp objects on it. Hanging the boat is not recommended.
- Open all air valves and deflate boat completely. Remove all the accessories from the boat; seats and oars.
- Fold the bow end twice to the middle of the boat tightly while forcing out any remaining air; repeat this procedure for the stern. The boat storage bag is designed to allow you to get your boat into the bag as easily as possible with minimal folds. Follow the diagram below for the best folding procedures:

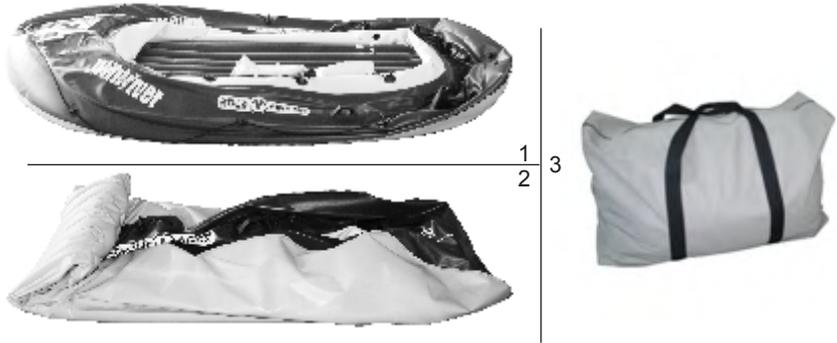

- Storage is best in a dry room. Ensure protection against rodents and other vermin, as they feed on the fabric of the canoe.
- Store the product and accessories in a dry, temperature controlled, between 32 degrees Fahrenheit (0 degrees Celsius) and 104 degrees Fahrenheit (40 degrees Celsius) storage location.

LEAK DETECTION AND REPAIR

AIR LEAK DETECTION

If your boat appears a bit soft, it might not be because of a leak. If the boat was inflated late in the day with 32°C (90°F) air, that air might cool down to 25°C (77°F) overnight. The cooler air exerts less pressure on the hull, so it could appear soft the next morning. If there has been no temperature variation, you need to start looking for a leak:

- Take a good look at your boat from just a few feet away. Flip it over and closely check over the outside. Any large leaks should be clearly visible.
- If you have an idea where your leak is, use a mix of dishwashing liquid and water in a spray bottle, and spray over the suspicious areas. Any leak will produce bubbles that will pinpoint the location of the leak.
- Check valves for leak, if necessary, spray soapy water around the valve and the valve base.

SMALL REPAIRS

Inadvertent punctures can be repaired using included vinyl repair patch. You can purchase additional PVC or silicon based glue for repairing camping mats, tents or shoes from your local market to patch your boat. Please refer to the instruction of the glue for patching.

1. Thoroughly clean and dry the damaged area. Completely deflate the product.
2. Cut a portion of the patch to cover the puncture and allow an additional 1/4" on all sides. Always cut a round patch, never leave square corners.
3. Be sure the repair area is completely dry.
4. Apply generous coat glue to the vinyl repair patch and to the product.
5. Allow the glue to dry for 2 to 3 minutes, or until the glue becomes tacky.

6. Apply the patch to the product, using your thumb or finger; apply even pressure across the entire surface of the patch. Make sure the edges of the patch are pressed down along the entire diameter.
 7. Allow the product to dry for at least 12 hours before inflating and using.
- If there are large tears/cracks, please bring the water craft or any essential equipment part into a professional repair shop for appropriate repair or replacement.

WARRANTY

AM warrants this product to be free from major defects in material or workmanship to the original purchaser for a period of SIX (6) Months from the date of purchase. This warranty is subject to the following limitations:

1. The warranty is valid only when the warranty card is completed and returns with in 30 days of date of purchase
2. The warranty is valid only when this product is used for normal recreational activities and does not cover products used in rental or school operations
3. AM will make the final warranty determination, which may require inspection and/or photos of the equipment, which clearly show the defect(s). If necessary, this information must be sent to the AM distributor in your country with prepaid postage. Product can be returned only if a return authorization number is given in advance by the AM distributor. The return authorization number must be clearly labeled on the outside of the package, or it will be refused
4. If a product is deemed to be defective by AM, the warranty covers the repair or replacement of the defective product only. AM will not be responsible for any costs, losses, or damages incurred as a result of loss or use of this product
5. This warranty does not cover damage caused by misuse, abuse, neglect, normal wear and tear including, but not limited to, punctures, damage due to excessive heat exposure, damage caused by improper handling and storage, damage caused by use in waves or shore break, board breakage caused by filling or crashing in surf conditions, or damage caused by anything other than defects in material and workmanship
6. This product must not be modified and/or fitted with a motor
7. This product must not be used in excess of the manufacturers recommended maximum load capacity
8. This warranty is void if any unauthorized repair, change or modification has been made to any part of the equipment
9. The warranty for any repaired or replacement equipment is good from the date of the original purchase only
10. The original purchase receipt must accompany all warranty claims. The name of the retailer and date of purchase must be clear and legible
11. There are no warranties that extend beyond the warranty specified here in



This product is designed in accordance with standards for a specific use. Any modifications or transformations higher than that indicated by the manufacturer could result in serious risks for the user and will void the warranty.

WARRANTY REGISTRATION CARD

DATE OF PURCHASE. DAY / MONTH / YEAR _____

INVOICE NUMBER _____

INFORMATION

NAME _____

ADDRESS _____

PHONE NUMBER _____

FAX NUMBER _____

E-MAIL _____

DEALER'S SEAL _____

PRODUCT MODEL _____

SERIAL IDENTIFICATION NUMBER _____

MANUFACTURER: ORIENTAL RECREATIONAL PRODUCTS (SHANGHAI) CO., LTD.

ADDRESS: No.1699 DaYe Rd, Wuqiao, FengXian District, Shanghai, China 201402 _____

PHONE: +86-21-57402084 _____

FAX: +86-21-57401306 _____

E-MAIL: info@orpc.com.cn _____