










E-GP AIR BY HELITE

SCHEMATIC MANUAL / NOTICE SCHEMA SCHEMATISCHE ANLEITUNG / MANUAL ESQUEMÁTICO MANUALE SCHEMATICO / SCHÉMATICKÝ MANUÁL

1.


-  Eléments
-  Components
-  Elemente
-  Elementos
-  Elementi
-  Prvky

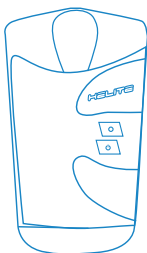

a)





 




b)



c)


5.A.

-  Allumer / Éteindre le gilet
-  Switch On/Off
-  An-und Ausschalten der Weste
-  Interruptor Encendido/ apagado
-  Accensione/spengimento
-  Zapnutí/ vypnutí

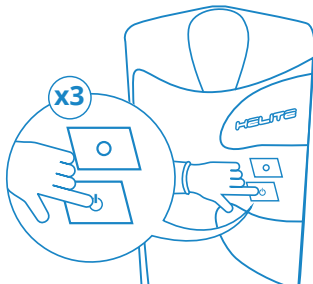


5.C.

-  Recharger la veste
-  Recharging the vest
-  Aufladen der Weste
-  Recargando el chaleco
-  Ricaricare il gilet
-  Dobíjení vesty

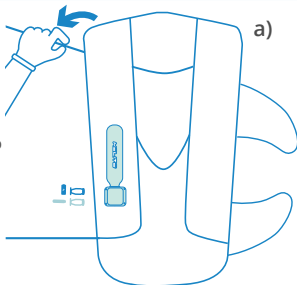

a)

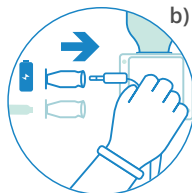







b)



c)

6.

-  Réutiliser le gilet après un accident
-  Reuse the vest after an inflation
-  Reaktivierung der Weste
-  Reutilice el chaleco
-  Riutilizzare il gilet dopo l'attivazione
-  Znovupoužití vesty po nafouknutí

